

# SERVICE & OPERATING MANUAL


## Original Instructions



## Model S30 Non-Metallic Design Level 2

### Table of Contents

|                                                                  |    |
|------------------------------------------------------------------|----|
| Engineering Data and Temperature Limitations .....               | 1  |
| Explanation of Pump Nomenclature .....                           | 2  |
| Performance Curve, Model S30 Non-Metallic Design Level 2 .....   | 3  |
| Dimensions: S30 Non-Metallic .....                               | 4  |
| Metric Dimensions: S30 Non-Metallic .....                        | 5  |
| Dimensions: S30 Non-Metallic with Spill Containment .....        | 6  |
| Metric Dimensions: S30 Non-Metallic with Spill Containment ..... | 7  |
| Principle of Pump Operation .....                                | 8  |
| Installation and Start-up .....                                  | 8  |
| Air Supply .....                                                 | 8  |
| Air Valve Lubrication .....                                      | 8  |
| Air Line Moisture .....                                          | 8  |
| Air Inlet and Priming .....                                      | 8  |
| Between Uses .....                                               | 8  |
| Installation Guide .....                                         | 9  |
| Important Safety Information .....                               | 10 |
| Material Codes .....                                             | 11 |
| Troubleshooting .....                                            | 12 |
| Warranty .....                                                   | 12 |
| Composite Repair Parts Drawing .....                             | 13 |
| Overlay Option Drawing .....                                     | 13 |
| Composite Repair Parts List .....                                | 14 |
| Spill Containment Option for Virgin PTFE Equipped Pumps .....    | 15 |
| Spill Containment Repair Parts List .....                        | 15 |
| Spill Containment Concept .....                                  | 16 |
| Spill Containment Option Diaphragm Servicing .....               | 16 |
| Filling Spill Containment Chambers with Liquid .....             | 16 |
| Spill Containment Option for TPE Equipped Pumps .....            | 17 |
| Spill Containment Repair Parts List .....                        | 17 |
| Spill Containment Concept with TPE Diaphragms .....              | 18 |
| Spill Containment Option with TPE Diaphragm .....                | 18 |
| Air Distribution Valve Assembly Drawing .....                    | 19 |
| Main Air Valve Assembly Parts List .....                         | 19 |

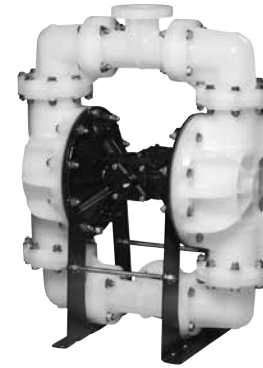

CE

|                                                                            |    |
|----------------------------------------------------------------------------|----|
| Air Distribution Valve Servicing .....                                     | 20 |
| Air Distribution Valve with Stroke Indicator Options .....                 | 21 |
| Air Distribution Valve with Stroke Indicator Parts List .....              | 21 |
| Air Distribution Valve with Stroke Indicator Servicing .....               | 22 |
| Solenoid Shifted Air Valve Drawing .....                                   | 23 |
| Solenoid Shifted Air Valve Parts List .....                                | 23 |
| Solenoid Shifted Air Distribution Valve Option .....                       | 24 |
| Pilot Valve Assembly Drawing .....                                         | 25 |
| Pilot Valve Assembly Parts List .....                                      | 25 |
| Pilot Valve Servicing .....                                                | 26 |
| Diaphragm Service Drawing, Non-Overlay .....                               | 27 |
| Diaphragm Service Drawing, with Overlay .....                              | 27 |
| Diaphragm Servicing .....                                                  | 28 |
| Overlay Diaphragm Service .....                                            | 28 |
| Pumping Hazardous Liquids .....                                            | 29 |
| Converting the pump for piping the exhaust air .....                       | 29 |
| Exhaust Conversion Drawing .....                                           | 29 |
| Converted Exhaust Illustration .....                                       | 29 |
| Modular Check Valve Servicing .....                                        | 30 |
| Modular Check Valve Drawing .....                                          | 30 |
| Dual Port Option Drawing .....                                             | 31 |
| Dual Porting Options .....                                                 | 32 |
| Dual porting of both suction and discharge ends of the pump .....          | 32 |
| Single porting of the suction and dual porting of the pump discharge ..... | 32 |
| Dual porting of the suction and single porting of the pump discharge ..... | 32 |
| Leak Detection Options Drawing .....                                       | 33 |
| Electronic Leak Detector Installation .....                                | 33 |
| Mechanical Leak Detector Installation .....                                | 33 |
| Pulse Output Kit Drawing .....                                             | 34 |
| Pulse Output Kit Option .....                                              | 34 |
| Optional Muffler Configurations, Drawing .....                             | 35 |
| Electronic Leak Detector Installation Instructions .....                   | 36 |
| EC Declaration of Conformity - Machinery .....                             | 37 |

# Safety Information

## ! IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

## ! CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



### WARNING

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.

## ! WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners are in good condition and are reinstalled properly during reassembly.




Use safe practices when lifting

## Recycling

Many components of SANDPIPER® Conductive Acetal AODD pumps are made of recyclable materials (see chart on page 10 for material specifications). We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed.

## Grounding ATEX Pumps

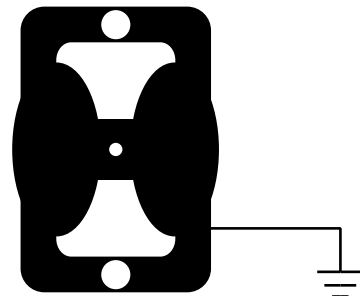

ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes. Pumps equipped with electrically conductive diaphragms are suitable for the transfer of conductive or non-conductive fluids of any explosion group. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN 13461-1: 2009 section 6.7.5 table 9, the following protection methods must be applied:

- Equipment is always used to transfer electrically conductive fluids or
- Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running


For further guidance on ATEX applications, please consult the factory.

**WARREN  
RUPP®**


Quality System  
ISO 9001 Certified

Environmental  
Management System  
ISO 14001 Certified

**IDEX**

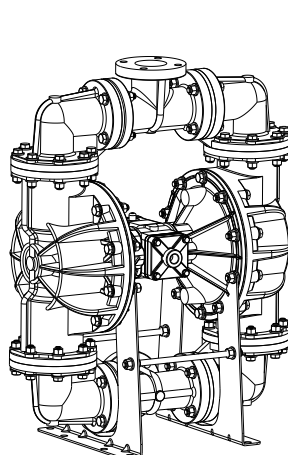

Air Inlet Side View

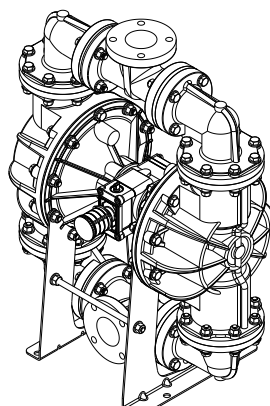

Air Exhaust Side View



**SANDPIPER®**  
A WARREN RUPP PUMP BRAND

## S30 Non-Metallic Ball Valve

### Design Level 2

### Air Operated Double Diaphragm Pump

ENGINEERING, PERFORMANCE  
& CONSTRUCTION DATA

| INTAKE/DISCHARGE PIPE SIZE           | CAPACITY                                                       | AIR VALVE                   | SOLIDS-HANDLING      | HEADS UP TO                                         | DISPLACEMENT/STROKE       |
|--------------------------------------|----------------------------------------------------------------|-----------------------------|----------------------|-----------------------------------------------------|---------------------------|
| 3" ANSI Flange or<br>80mm DIN Flange | 0 to 238 US gallons per minute<br>(0 to 901 liters per minute) | No-lube, no-stall<br>design | Up to .71 in. (18mm) | 100 psi or 231 ft. of water<br>(7 bar or 70 meters) | .9 US gallon / 3.41 liter |

**⚠ CAUTION!** *Maximum Operating Temperature Limit is 180°F for Polypropylene and 250°F for PVDF Models.*

#### Materials

|                                                                                                                                                                                                                                                                                                                                | Temperature Limits |                |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|----------------|
|                                                                                                                                                                                                                                                                                                                                | Maximum            | Minimum        |
| <b>Santoprene®:</b> Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.                                                                                                                                                                                   | 275°F<br>88°C      | -40°F<br>-40°C |
| <b>Virgin PTFE:</b> Chemically inert, virtually impervious. Very few chemicals are known to react chemically with PTFE: molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures. | 350°F<br>177°C     | -35°F<br>-37°C |
| <b>Polypropylene</b>                                                                                                                                                                                                                                                                                                           | 180°F<br>82°C      | 32°F<br>0°C    |
| <b>PVDF</b>                                                                                                                                                                                                                                                                                                                    | 250°F<br>121°C     | 0°F<br>-18°C   |

For specific applications, always consult "Chemical Resistance Chart" Technical Bulletin

**CAUTION:** Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.

**SANDPIPER® pumps are designed to be powered only by compressed air.**

*Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.*

# Explanation of Pump Nomenclature

## S30 Non-Metallic · Design Level 2· Ball Valve

| MODEL           | Pump Brand | Pump Size | Check Valve Type | Design Level | Wetted Material | Diaphragm/ Check Valve Materials | Check Valve Seat | Non-Wetted Material Options | Porting Options | Pump Style | Pump Options | Kit Options | Shipping Weight lbs. (kg) |
|-----------------|------------|-----------|------------------|--------------|-----------------|----------------------------------|------------------|-----------------------------|-----------------|------------|--------------|-------------|---------------------------|
| S30B2P1PQAS000. | S          | 30        | B                | 2            | P               | 1                                | P                | Q                           | A               | S          | 0            | 00.         | 231 (105)                 |
| S30B2P2PQAS000. | S          | 30        | B                | 2            | P               | 2                                | P                | Q                           | A               | S          | 0            | 00.         | 231 (105)                 |
| S30B2K1KQAS000. | S          | 30        | B                | 2            | K               | 1                                | K                | Q                           | A               | S          | 0            | 00.         | 315 (143)                 |
| S30B2K2KQAS000. | S          | 30        | B                | 2            | K               | 2                                | K                | Q                           | A               | S          | 0            | 00.         | 315 (143)                 |
| S30B2P4PQAV000. | S          | 30        | B                | 2            | P               | 4                                | P                | Q                           | A               | V          | 0            | 00.         | 270 (122)                 |
| S30B2K4KQAV000. | S          | 30        | B                | 2            | K               | 4                                | K                | Q                           | A               | V          | 0            | 00.         | 354 (161)                 |

### Pump Brand

S= SANDPIPER®

### Pump Size

30=3"

### Check Valve Type

B= Ball

### Design Level

2= Design Level 2

### Wetted Material

K= PVDF

P= Polypropylene

### Diaphragm Check Valve Materials

1= Santoprene/Santoprene

2= PTFE-Santoprene Backup/PTFE

3= PTFE Pumping, PTFE-Santoprene Backup Driver/PTFE

4= Santoprene Pumping, Santoprene Driver/Santoprene

### Check Valve Seat

K= PVDF

P= Polypropylene

U= Polyurethane/ Polyurethane

### Non-Wetted Material Options

A= Painted Aluminum

J= Painted Aluminum PTFE

Q=Epoxy Coated Aluminum

K= PTFE Coated Aluminum

L= PTFE Coated Aluminum with PTFE Coated Hardware

R=Epoxy Coated Aluminum with PTFE Coated Hardware

### Porting Options

A= ANSI Flange

D= DIN Flange

7= Dual Porting (ANSI)

8= Top Dual Porting (ANSI)

9= Bottom Dual Porting (ANSI)

### Pump Style

D= Spill Containment with Electronic Leak Detection (110V)

E= Spill Containment with Electronic Leak Detection (220V)

M=Spill Containment with Mechanical Leak Detection

S= Standard

V= Spill Containment with Visual Leak Detection

### Pump Options

0= None

### Kit Options

00.= None

P0.= 10-30VDC Pulse Output Kit

P1.= Intrinsically-Safe 5-30VDC, 110/120VAC, 220/240VAC Pulse Output Kit

P2.= 110/120 or 220/240VAC Pulse Output Kit

E0.= Solenoid Kit with 24VDC Coil

E1.= Solenoid Kit with 24VDC Explosion-Proof Coil

E2.= Solenoid Kit with 24VAC/12VDC Coil

E3.= Solenoid Kit with 12VDC Explosion-Proof Coil

E4.= Solenoid Kit with 110VAC Coil

E5.= Solenoid Kit with 110VAC, 60 Hz Explosion-Proof Coil

E6.= Solenoid Kit with 220VAC Coil


E7.= Solenoid Kit with 220VAC, 60 Hz Explosion-Proof Coil

E8.= Solenoid Kit with 110VAC, 50 Hz Explosion-Proof Coil

E9.= Solenoid Kit with 230VAC, 50 Hz Explosion-Proof Coil

SP.= Stroke Indicator Pins


# Performance Curve, Model S30 Non-Metallic Design Level 2

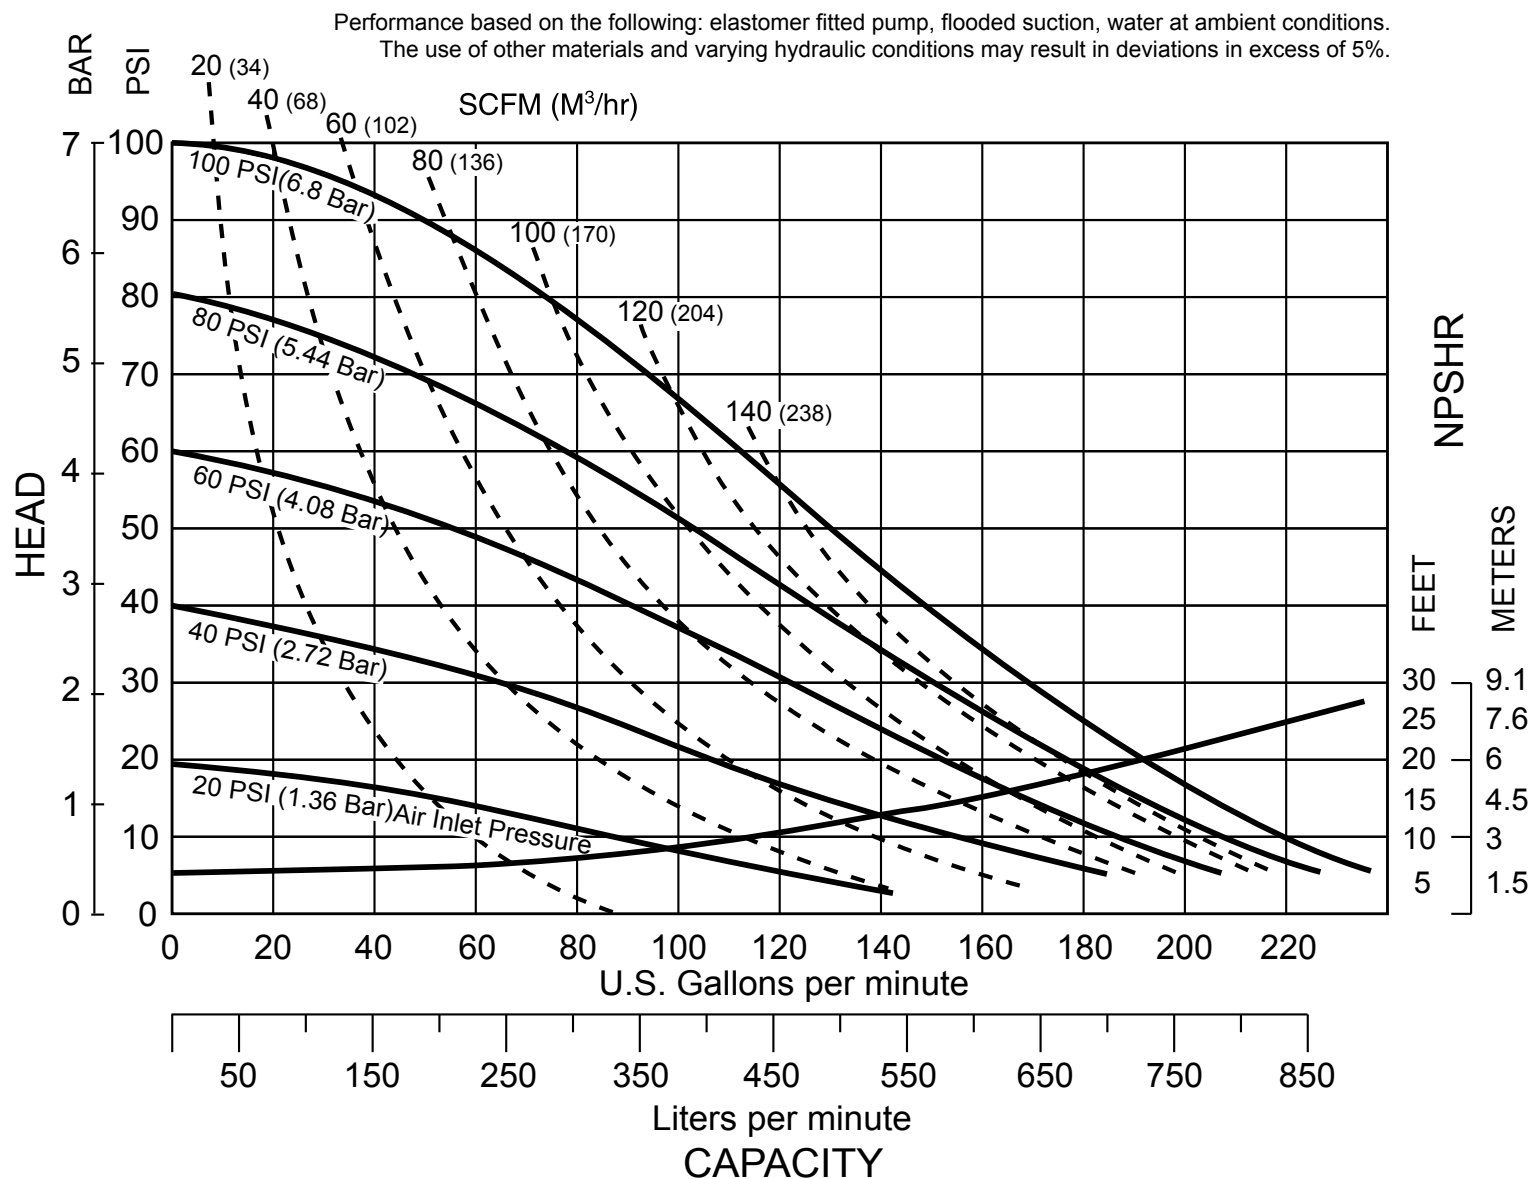

# Dimensions: S30 Non-Metallic

Dimensions in Inches  
Dimensional tolerance:  $\pm 1/8$ "

**Note:** Dimensions "A" is from the vertical center line to the end of the muffler.

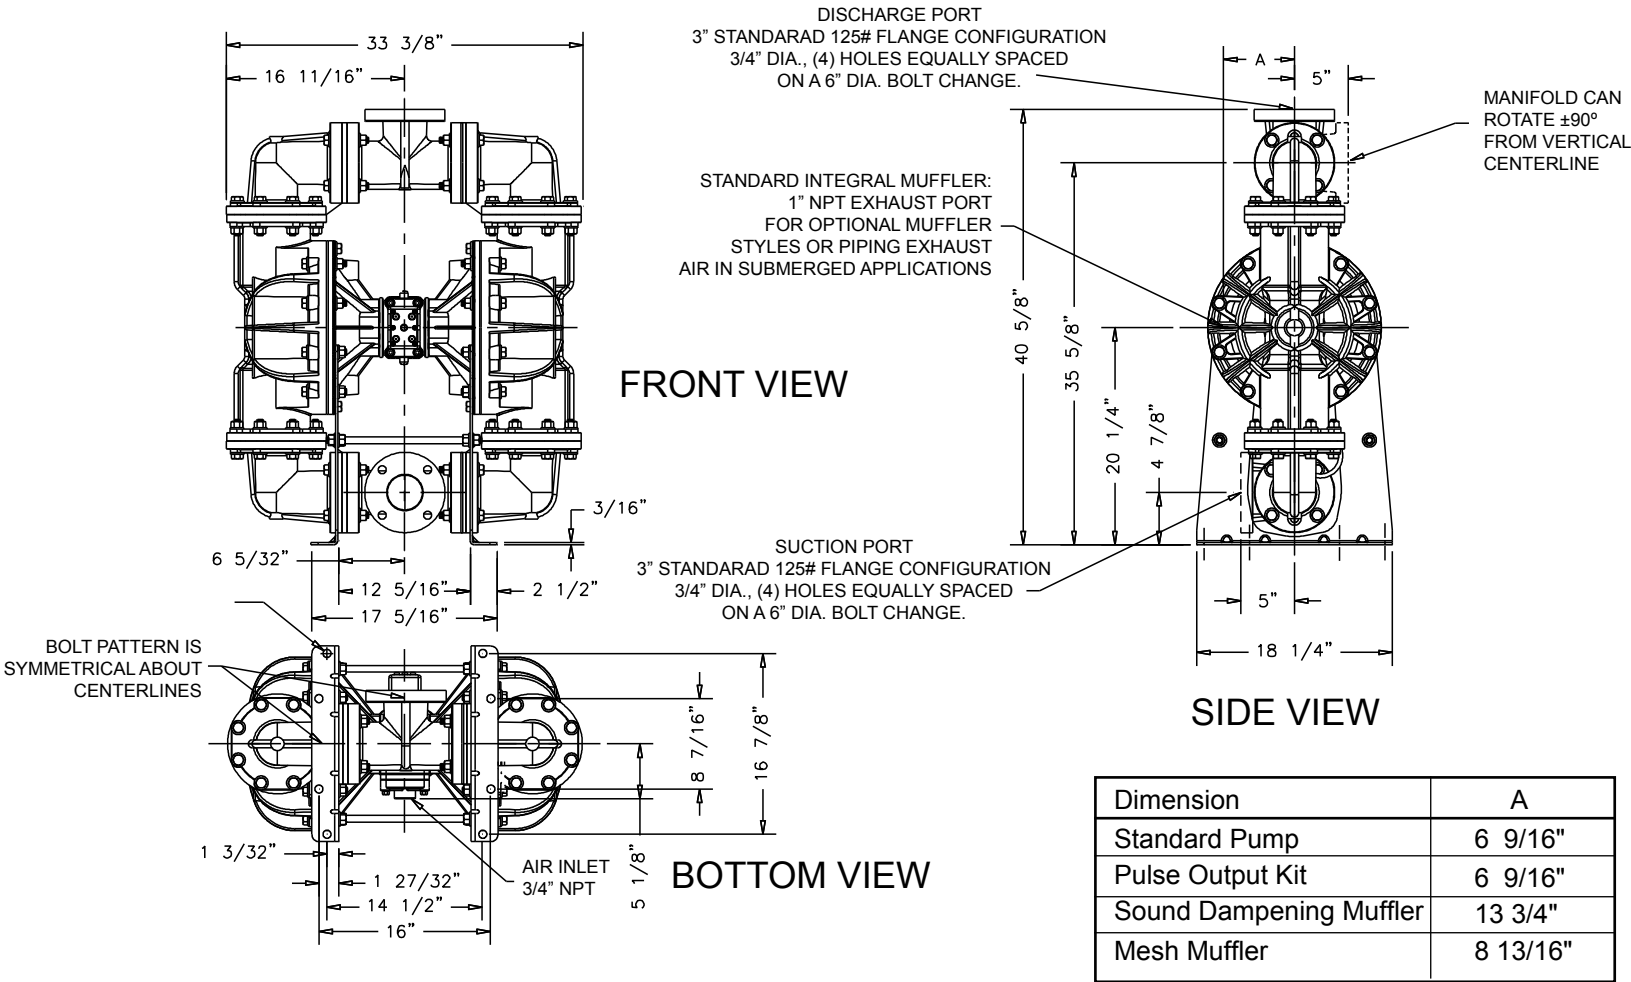


**Note:** Porting Flanges are also available with  
 PN10 80mm DIN bolting configuration.

# Metric Dimensions: S30 Non-Metallic

Dimensions in Millimeters  
Dimensional tolerance:  $\pm 3\text{mm}$

**Note:** Dimensions "A" is from the vertical center line to the end of the muffler.

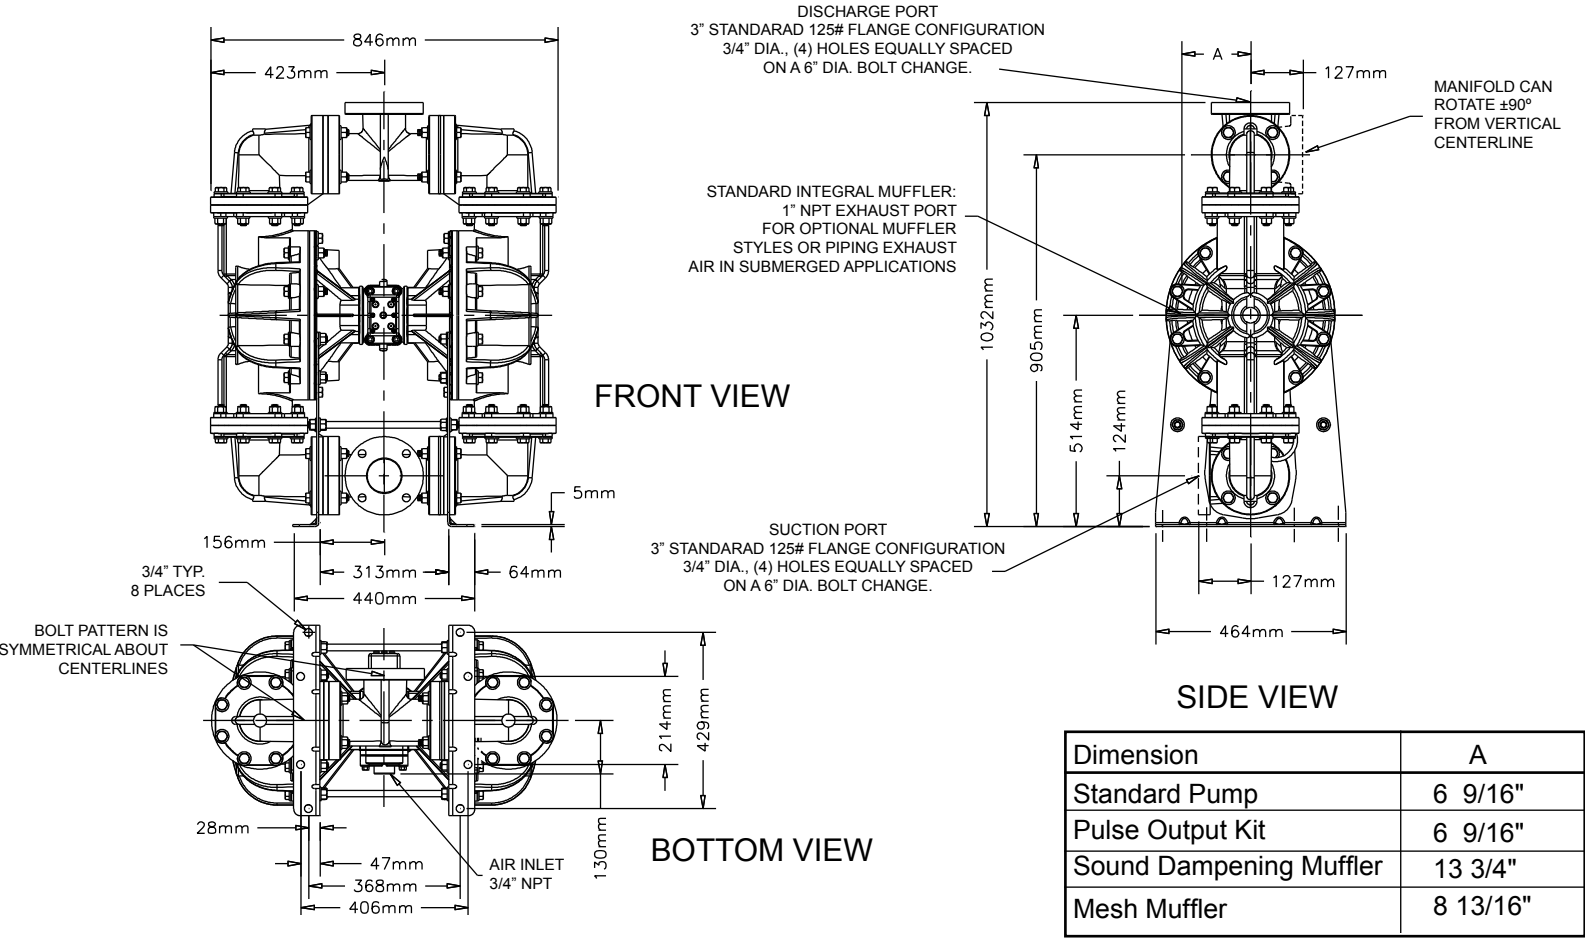


**Note:** Porting Flanges are also available with PN10 80mm DIN bolting configuration.

# Dimensions: S30 Non-Metallic with Spill Containment

Dimensions in Inches  
Dimensional tolerance:  $\pm 1/8$ "

**Note:** Dimensions "A" is from the vertical center line to the end of the muffler.


**Note:** Dimensions "B" is from the opposite side of the pump to the end of the muffler.

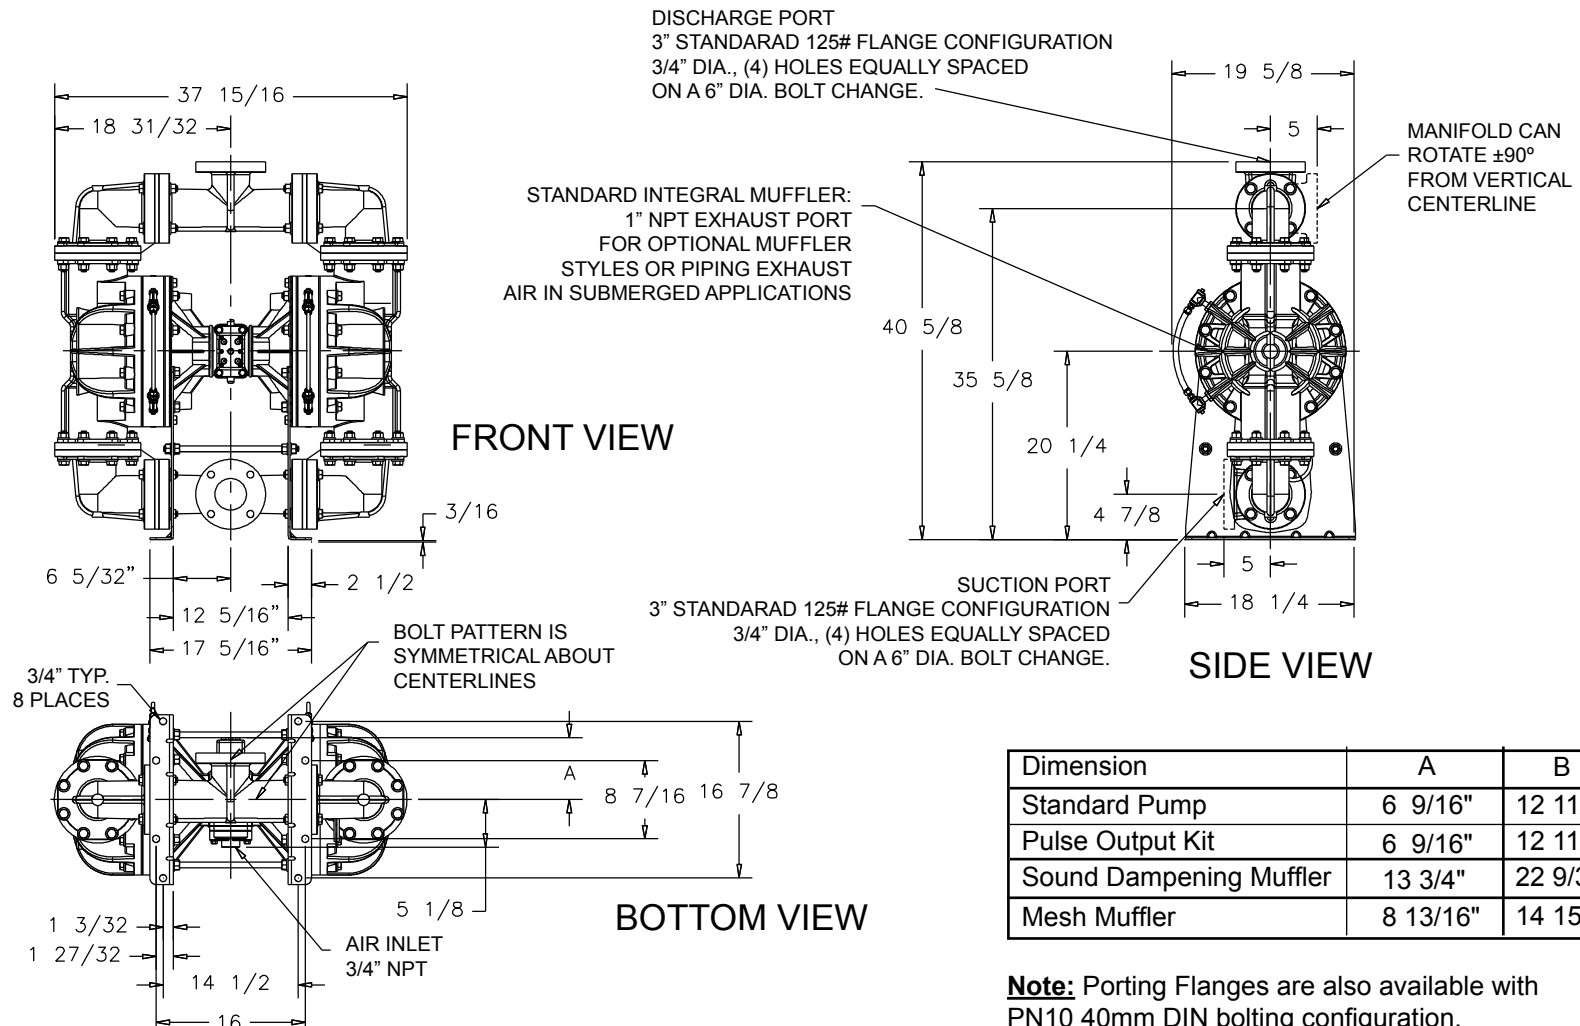

# Metric Dimensions: S30 Non-Metallic with Spill Containment

Dimensions in Millimeters

Dimensional tolerance:  $\pm 3\text{mm}$

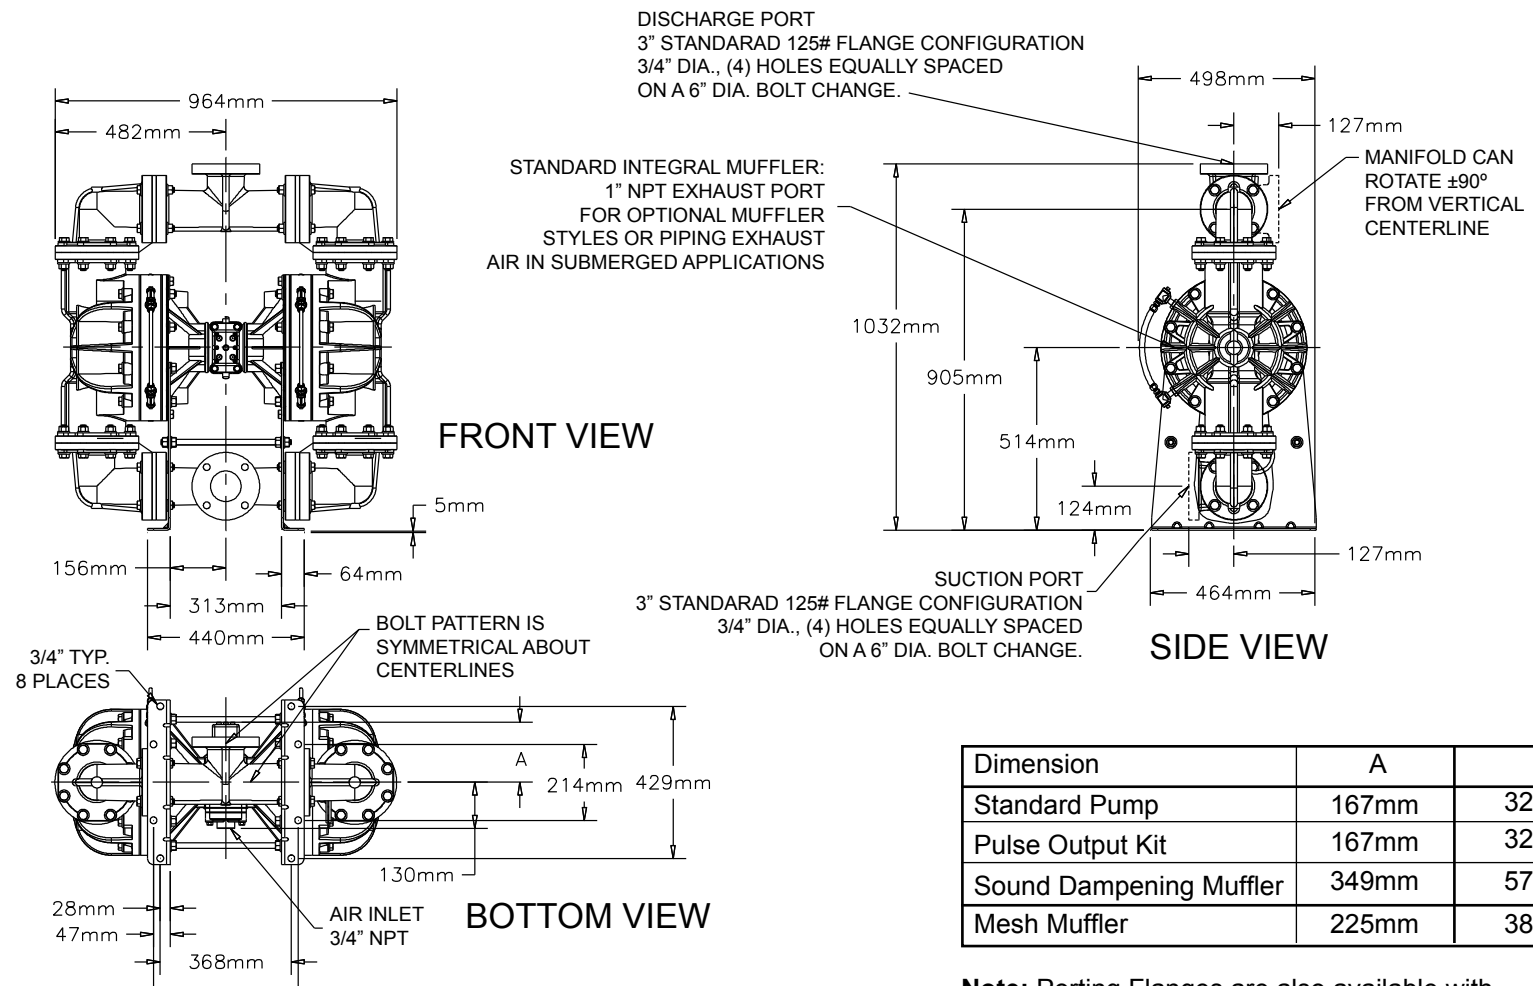

**Note:** Porting Flanges are also available with  
PN10 80mm DIN bolting configuration.

## PRINCIPLE OF PUMP OPERATION

This ball type check valve pump is powered by compressed air and is a 1:1 ratio design. The inner side of one diaphragm chamber is alternately pressurized while simultaneously exhausting the other inner chamber. This causes the diaphragms, which are connected by a common rod secured by plates to the centers of the diaphragms, to move in a reciprocating action. (As one diaphragm performs the discharge stroke the other diaphragm is pulled to perform the suction stroke in the opposite chamber.) Air pressure is applied over the entire inner surface of the diaphragm while liquid is discharged from the opposite side of the diaphragm. The diaphragm operates in a balanced condition during the discharge stroke which allows the pump to be operated at discharge heads over 200 feet (61 meters) of water.

For maximum diaphragm life, keep the pump as close to the liquid being pumped as possible. Positive suction head in excess of 10 feet of liquid (3.048 meters) may require a back pressure regulating device to maximize diaphragm life.

Alternate pressurizing and exhausting of the diaphragm chamber is performed by an externally mounted, pilot operated, four way spool type air distribution valve. When the spool shifts to one end of the valve body, inlet pressure is applied to one diaphragm chamber and the other diaphragm chamber exhausts. When the spool shifts to the opposite end of the valve body, the pressure to the chambers

is reversed. The air distribution valve spool is moved by a internal pilot valve which alternately pressurizes one end of the air distribution valve spool while exhausting the other end. The pilot valve is shifted at each end of the diaphragm stroke when an actuator plunger is contacted by the diaphragm plate. This actuator plunger then pushes the end of the pilot valve spool into position to activate the air distribution valve.

The chambers are connected with manifolds with a suction and discharge check valve for each chamber, maintaining flow in one direction through the pump.

## INSTALLATION AND START-UP

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

For installations of rigid piping, short sections of flexible hose should be installed between the pump and the piping. The flexible hose reduces vibration and strain to the pumping system. A surge suppressor is recommended to further reduce pulsation in flow.

## AIR SUPPLY

Air supply pressure cannot exceed 100 psi (7 bar). Connect the pump air inlet to an air supply of sufficient capacity and pressure required for desired performance. When the air supply line is solid piping, use a short length of flexible hose not less than ½" (13mm) in diameter between the pump and the piping to reduce strain to the

piping. The weight of the air supply line, regulators and filters must be supported by some means other than the air inlet cap. Failure to provide support for the piping may result in damage to the pump. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

## AIR VALVE LUBRICATION

The air distribution valve and the pilot valve are designed to operate WITHOUT lubrication. This is the preferred mode of operation. There may be instances of personal preference or poor quality air supplies when lubrication of the compressed air supply is required. The pump air system will operate with properly lubricated compressed air supply. Proper lubrication requires the use of an air line lubricator (available from Warren Rupp) set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes at the point of operation. Consult the pump's published Performance Curve to determine this.

## AIR LINE MOISTURE

Water in the compressed air supply can create problems such as icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer to supplement the user's air drying equipment. This device removes water from the compressed air supply and alleviates the icing or freezing problems.

## AIR INLET AND PRIMING

To start the pump, open the air valve approximately ½ to ¾ turn. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

## BETWEEN USES

When the pump is used for materials that tend to settle out or solidify when not in motion, the pump should be flushed after each use to prevent damage. (Product remaining in the pump between uses could dry out or settle out. This could cause problems with the diaphragms and check valves at restart.) In freezing temperatures the pump must be completely drained between uses in all cases.



## INSTALLATION GUIDE

### Top Discharge Ball Valve Unit


Available from  
Warren Rupp

- ① Surge Suppressor
- ② 020-051-000 Filter/Regulator
- ③ Air Dryer



#### CAUTION

The air exhaust should be piped to an area for safe disposition of the product being pumped, in the event of a diaphragm failure.

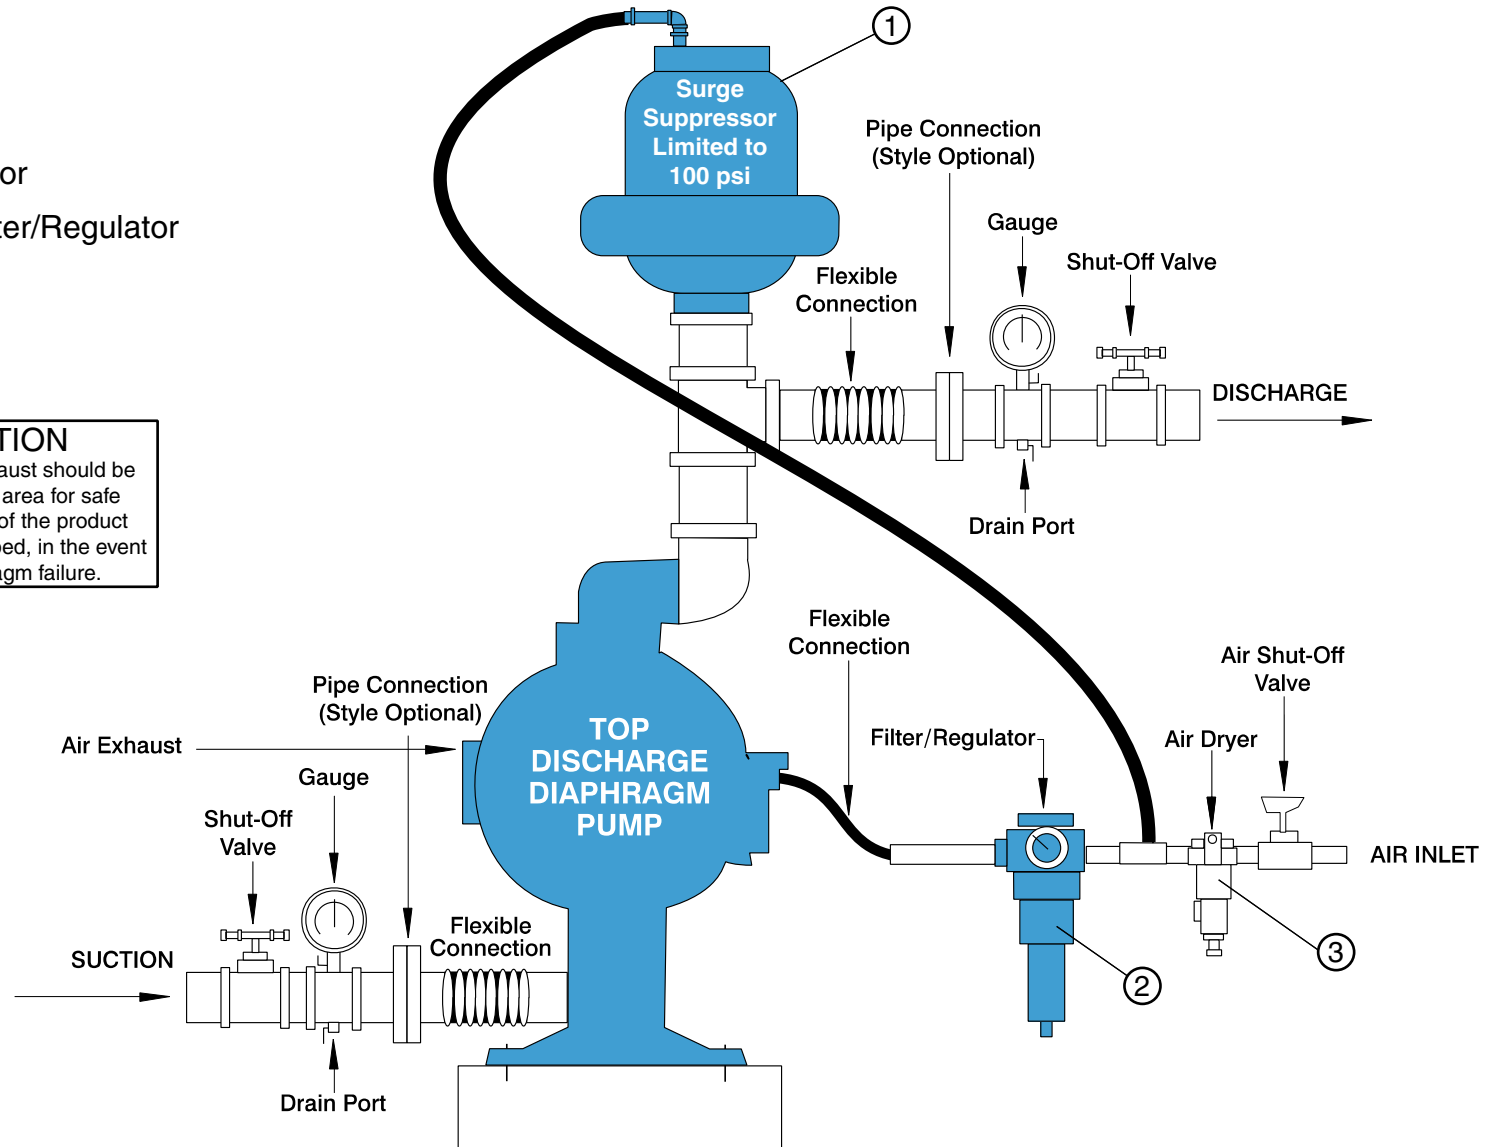

## MATERIAL CODES

### THE LAST 3 DIGITS OF PART NUMBER

|     |                                                      |     |                                                                      |     |                                                   |     |                                                                                               |
|-----|------------------------------------------------------|-----|----------------------------------------------------------------------|-----|---------------------------------------------------|-----|-----------------------------------------------------------------------------------------------|
| 000 | Assembly, sub-assembly;<br>and some purchased items  | 306 | Carbon Steel, Black PTFE Coated                                      | 374 | Carboxylated Nitrile                              | 604 | PTFE                                                                                          |
| 010 | Cast Iron                                            | 307 | Aluminum, Black Epoxy Coated                                         | 375 | Fluorinated Nitrile                               | 606 | PTFE                                                                                          |
| 012 | Powered Metal                                        | 308 | Stainless Steel, Black PTFE Coated                                   | 378 | High Density Polypropylene                        | 607 | Envelon                                                                                       |
| 015 | Ductile Iron                                         | 309 | Aluminum, Black PTFE Coated                                          | 379 | Conductive Nitrile                                | 608 | Conductive PTFE                                                                               |
| 020 | Ferritic Malleable Iron                              | 310 | PVDF Coated                                                          | 405 | Cellulose Fibre                                   | 610 | PTFE Encapsulated Silicon                                                                     |
| 025 | Music Wire                                           | 313 | Aluminum, White Epoxy Coated                                         | 408 | Cork and Neoprene                                 | 611 | PTFE Encapsulated FKM                                                                         |
| 080 | Carbon Steel, AISI B-1112                            | 330 | Zinc Plated Steel                                                    | 425 | Compressed Fibre                                  | 632 | Neoprene/Hytrel                                                                               |
| 100 | Alloy 20                                             | 331 | Chrome Plated Steel                                                  | 426 | Blue Gard                                         | 633 | FKM/PTFE                                                                                      |
| 110 | Alloy Type 316 Stainless Steel                       | 332 | Aluminum, Electroless Nickel Plated                                  | 440 | Vegetable Fibre                                   | 634 | EPDM/PTFE                                                                                     |
| 111 | Alloy Type 316 Stainless Steel<br>(Electro Polished) | 333 | Carbon Steel, Electroless<br>Nickel Plated                           | 465 | Fibre                                             | 635 | Neoprene/PTFE                                                                                 |
| 112 | Alloy C                                              | 335 | Galvanized Steel                                                     | 500 | Delrin 500                                        | 637 | PTFE, FKM/PTFE                                                                                |
| 113 | Alloy Type 316 Stainless Steel<br>(Hand Polished)    | 336 | Zinc Plated Yellow Brass                                             | 501 | Delrin 570                                        | 638 | PTFE, Hytrel/PTFE                                                                             |
| 114 | 303 Stainless Steel                                  | 337 | Silver Plated Steel                                                  | 502 | Conductive Acetal, ESD-800                        | 639 | Nitrile/TFE                                                                                   |
| 115 | 302/304 Stainless Steel                              | 340 | Nickel Plated                                                        | 503 | Conductive Acetal, Glass-Filled                   | 643 | Santoprene®/EPDM                                                                              |
| 117 | 440-C Stainless Steel (Martensitic)                  | 342 | Filled Nylon                                                         | 505 | Acrylic Resin Plastic                             | 644 | Santoprene®/PTFE                                                                              |
| 120 | 416 Stainless Steel<br>(Wrought Martensitic)         | 351 | Food Grade Santoprene                                                | 506 | Delrin 150                                        | 656 | Santoprene Diaphragm and<br>Check Balls/EPDM Seats                                            |
| 123 | 410 Stainless Steel<br>(Wrought Martensitic)         | 353 | Geolast; Color: Black                                                | 520 | Injection Molded PVDF<br>Natural color            | 661 | EPDM/Santoprene                                                                               |
| 148 | Hardcoat Anodized Aluminum                           | 354 | Injection Molded #203-40<br>Santoprene- Duro 40D +/-5;<br>Color: RED | 540 | Nylon                                             | 666 | FDA Nitrile Diaphragm,<br>PTFE Overlay, Balls, and Seals                                      |
| 149 | 2024-T4 Aluminum                                     | 355 | Thermal Plastic                                                      | 541 | Nylon                                             | 668 | PTFE, FDA Santoprene/PTFE                                                                     |
| 150 | 6061-T6 Aluminum                                     | 356 | Hytrel                                                               | 542 | Nylon                                             |     |                                                                                               |
| 151 | 6063-T6 Aluminum                                     | 357 | Injection Molded Polyurethane                                        | 544 | Nylon Injection Molded                            |     | Delrin and Hytrel are registered<br>tradenames of E.I. DuPont.                                |
| 152 | 2024-T4 Aluminum (2023-T351)                         | 358 | Urethane Rubber<br>(Some Applications)<br>(Compression Mold)         | 550 | Polyethylene                                      |     | Gylon is a registered tradename<br>of Garlock, Inc.                                           |
| 154 | Almag 35 Aluminum                                    | 359 | Urethane Rubber                                                      | 551 | Glass Filled Polypropylene                        |     | Nylatron is a registered tradename<br>of Polymer Corp.                                        |
| 155 | 356-T6 Aluminum                                      | 360 | Nitrile Rubber Color coded: RED                                      | 552 | Unfilled Polypropylene                            |     | Santoprene is a registered tradename<br>of Exxon Mobil Corp.                                  |
| 156 | 356-T6 Aluminum                                      | 361 | Nitrile                                                              | 553 | Unfilled Polypropylene                            |     | Rulon II is a registered tradename<br>of Dixon Industries Corp.                               |
| 157 | Die Cast Aluminum Alloy #380                         | 363 | FKM (Fluorocarbon).<br>Color coded: YELLOW                           | 555 | Polyvinyl Chloride                                |     | Ryton is a registered tradename<br>of Phillips Chemical Co.                                   |
| 158 | Aluminum Alloy SR-319                                | 364 | E.P.D.M. Rubber.<br>Color coded: BLUE                                | 556 | Black Vinyl                                       |     | Valox is a registered tradename<br>of General Electric Co.                                    |
| 159 | Anodized Aluminum                                    | 365 | Neoprene Rubber.<br>Color coded: GREEN                               | 557 | Conductive Polypropylene                          |     | PortaPump, Tranquilizer and<br>SludgeMaster are registered tradenames<br>of Warren Rupp, Inc. |
| 162 | Brass, Yellow, Screw Machine Stock                   | 366 | Food Grade Nitrile                                                   | 558 | Conductive HDPE                                   |     |                                                                                               |
| 165 | Cast Bronze, 85-5-5-5                                | 368 | Food Grade EPDM                                                      | 559 | Glass-Filled Conductive Polypropylene             |     |                                                                                               |
| 166 | Bronze, SAE 660                                      | 370 | Butyl Rubber<br>Color coded: BROWN                                   | 570 | Rulon II                                          |     |                                                                                               |
| 170 | Bronze, Bearing Type,<br>Oil Impregnated             | 371 | Phlthane (Tuftane)                                                   | 580 | Ryton                                             |     |                                                                                               |
| 175 | Die Cast Zinc                                        |     |                                                                      | 590 | Valox                                             |     |                                                                                               |
| 180 | Copper Alloy                                         |     |                                                                      | 591 | Nylatron G-S                                      |     |                                                                                               |
| 305 | Carbon Steel, Black Epoxy Coated                     |     |                                                                      | 592 | Nylatron NSB                                      |     |                                                                                               |
|     |                                                      |     |                                                                      | 600 | PTFE (virgin material)<br>Tetrafluorocarbon (TFE) |     |                                                                                               |
|     |                                                      |     |                                                                      | 601 | PTFE (Bronze and moly filled)                     |     |                                                                                               |
|     |                                                      |     |                                                                      | 602 | Filled PTFE                                       |     |                                                                                               |
|     |                                                      |     |                                                                      | 603 | Blue Gylon                                        |     |                                                                                               |

## **TROUBLESHOOTING**

### **Possible Symptoms:**

- Pump will not cycle.
- Pump cycles, but produces no flow.
- Pump cycles, but flow rate is unsatisfactory.
- Pump cycle seems unbalanced.
- Pump cycle seems to produce excessive vibration.

**What to Check:** Excessive suction lift in system.

**Corrective Action:** For lifts exceeding 20 feet (6 meters), filling the pumping chambers with liquid will prime the pump in most cases.

**What to Check:** Excessive flooded suction in system.

**Corrective Action:** For flooded conditions exceeding 10 feet (3 meters) of liquid, install a back pressure device.

**What to Check:** System head exceeds air supply pressure.

**Corrective Action:** Increase the inlet air pressure to the pump. Most diaphragm pumps are designed for 1:1 pressure ratio at zero flow.

**What to Check:** Air supply pressure or volume exceeds system head.

**Corrective Action:** Decrease inlet air pressure and volume to the pump as calculated on the published PERFORMANCE CURVE. Pump is cavitating the fluid by fast cycling.

**What to Check:** Undersized suction line.

**Corrective Action:** Meet or exceed pump connection recommendations shown on the DIMENSIONAL DRAWING.

**What to Check:** Restricted or undersized air line.

**Corrective Action:** Install a larger air line and connection. Refer to air inlet recommendations shown in your pump's SERVICE MANUAL.

**What to Check:** Check ESADS+Plus, the Externally Serviceable Air Distribution System of the pump.

**Corrective Action:** Disassemble and inspect the main air distribution valve, pilot valve and pilot valve actuators. Refer to the parts drawing and air valve section of the SERVICE MANUAL. Check for clogged discharge or closed valve before reassembly.

**What to Check:** Rigid pipe connections to pump.

**Corrective Action:** Install flexible connectors and a surge suppressor.

**What to Check:** Blocked air exhaust muffler.

**Corrective Action:** Remove muffler screen, clean or de-ice and reinstall. Refer to the Air Exhaust section of your pump SERVICE MANUAL.

**What to Check:** Pumped fluid in air exhaust muffler.

**Corrective Action:** Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. Refer to the Diaphragm Replacement section of your pump SERVICE MANUAL.

**What to Check:** Suction side air leakage or air in product.

**Corrective Action:** Visually inspect all suction side gaskets and pipe connections.

**What to Check:** Obstructed check valve.

**Corrective Action:** Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Refer to the Check Valve section of the pump SERVICE MANUAL for disassembly instructions.

**What to Check:** Worn or misaligned check valve or check valve seat.

**Corrective Action:** Inspect check valves and seats for wear and proper seating. Replace if necessary. Refer to Check Valve section of the pump SERVICE MANUAL for disassembly instructions.

**What to Check:** Blocked suction line.

**Corrective Action:** Remove or flush obstruction. Check and clear all suction screens and strainers.

**What to Check:** Blocked discharge line.

**Corrective Action:** Check for obstruction or closed discharge line valves.

**What to Check:** Blocked pumping chamber.

**Corrective Action:** Disassemble and inspect the wetted chambers of the pump. Remove or flush any obstructions. Refer to the pump SERVICE MANUAL for disassembly instructions.

**What to Check:** Entrained air or vapor lock in one or both pumping chambers.

**Corrective Action:** Purge chambers through tapped chamber vent plugs. PURGING THE CHAMBERS OF AIR CAN BE DANGEROUS! Contact the Warren Rupp Technical Services Department before performing this procedure. A model with top-ported discharge will reduce or eliminate problems with entrained air.

If your pump continues to perform below your expectations, contact your local Warren Rupp Distributor or factory Technical Services Group for a service evaluation.

## **WARRANTY**

Refer to the enclosed Warren Rupp Warranty Certificate.

# Composite Repair Parts Drawing

## AVAILABLE SERVICE AND CONVERSION KITS

### 476-176-000 AIR END KIT

Seals, O-rings, Gaskets, Retaining Rings, Air Valve Sleeve & Spool Set and Pilot Valve Assembly.

### 476-177-000\* AIR END KIT (for Stroke Indicator Option)

Seals, O-rings, Gaskets, Retaining Rings, Air Valve Sleeve & Spool Set and Pilot Valve Assembly.

### 476-140-354 WETTED END KIT

Santoprene Diaphragms, Santoprene Balls and TFE Seals.

### 476-140-654 WETTED END KIT

Santoprene Diaphragms, PTFE Overlay Diaphragms, TFE Balls and TFE Seals.

### 476-143-354 WETTED END KIT (for Polypropylene Spill Containment)

Santoprene Diaphragms, PTFE Overlay Diaphragms, PTFE Pumping Diaphragms, PTFE Balls and PTFE Seals.

### 476-143-655 WETTED END KIT (for PVDF Spill Containment)

Santoprene Diaphragms, PTFE Overlay Diaphragms, PTFE Pumping Diaphragms, PTFE Balls and PTFE Seals.

## HARDWARE KITS


475-173-308 PTFE Coated Stainless Steel Capscrews, Hex Nuts, Washers and Support Rod

475-174-308 (For use with Spill Containment Options)

## ELECTRONIC LEAK DETECTOR KITS

032-037-000 100VAC 50Hz  
or 110-120VAC 50-60Hz  
or 220-240VAC 50-60Hz


032-045-000 12-32VDC

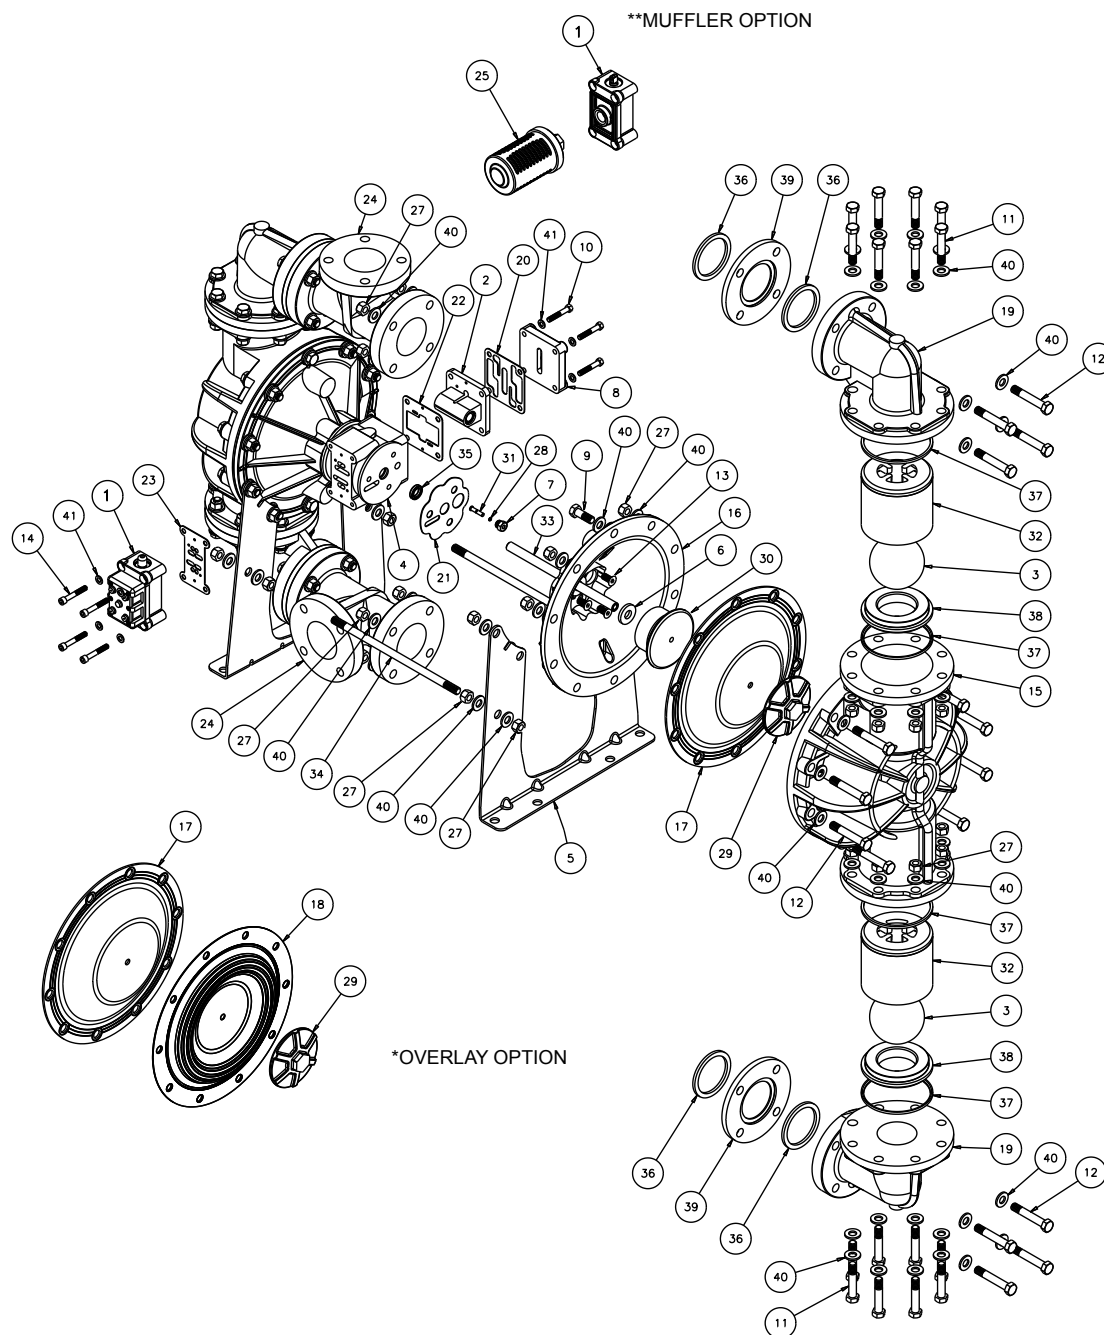

# Composite Repair Parts List

| ITEM | PART NUMBER | DESCRIPTION                                 | QTY | ITEM       | PART NUMBER  | DESCRIPTION                           | QTY |
|------|-------------|---------------------------------------------|-----|------------|--------------|---------------------------------------|-----|
| 1    | 031-140-000 | Air Valve Assembly                          | 1   | 17         | 286-077-354  | Diaphragm                             | 2   |
|      | 031-140-001 | Air Valve Assembly                          | 1   |            | 286-077-357  | Diaphragm                             | 2   |
|      | 031-140-002 | Air Valve Assembly                          |     | 18         | 286-078-600  | Diaphragm, Overlay                    | 2   |
|      |             | w/PTFE Coated Hardware                      | 1   | 19         | 312-103-520  | Elbow                                 | 4   |
|      | 031.140.162 | Air Valve Assembly                          | 1   |            | 312-103-552  | Elbow                                 | 4   |
|      |             | (Brass Spool - Stainless Sleeve)            |     | 20         | 360-090-360  | Gasket, Air Inlet                     | 1   |
|      | 031-141-000 | Air Valve Assembly (No Muffler)             | 1   | 21         | 360-091-360  | Gasket, Inner Chamber                 | 2   |
|      | 031-141-001 | Air Valve Assembly (No Muffler)             | 1   | 22         | 360-092-360  | Gasket, Pilot Valve                   | 1   |
|      | 031-141-162 | Air Valve Assembly                          |     | 23         | 360-093-360  | Gasket, Main Air Valve                | 1   |
|      |             | (No Muffler Brass Spool - Stainless Sleeve) |     | 24         | 518-133-520  | Manifold                              | 2   |
|      | 031-146-000 | Air Valve Assembly                          |     |            | 518-133-520E | Manifold, 80mm DIN                    | 2   |
|      |             | (With Stroke Indicator Option)              | 1   |            | 518-133-552  | Manifold                              | 2   |
|      | 031-147-000 | Air Valve Assembly                          |     |            | 518-133-552E | Manifold, 80mm DIN                    | 2   |
|      |             | (With Stroke Indicator Option) (No Muffler) | 1   | 25         | 530-027-000  | Muffler                               | 1   |
| 2    | 095-089-000 | Pilot Valve Assembly                        | 1   |            | 530-010-000  | Muffler                               | 1   |
| 3    | 050-039-354 | Ball, Check                                 | 4   | 27         | 545-009-110  | Nut, Hex 5/8                          | 72  |
|      | 050-039-357 | Ball, Check                                 | 4   |            | 545-009-308  | Nut, Hex 5/8                          | 72  |
|      | 050-039-600 | Ball, Check                                 | 4   | 28         | 560-001-360  | O-ring                                | 2   |
| 4    | 114-021-307 | Intermediate Assembly                       | 1   | 29         | 612-161-520  | Assembly, Outer Diaphragm Plate       | 2   |
|      | 114-021-309 | Intermediate Assembly                       | 1   |            | 612-161-552  | Assembly, Outer Diaphragm Plate       | 2   |
|      | 114-021-332 | Intermediate Assembly                       | 1   | 30         | 612-162-150  | Assembly, Inner Diaphragm Plate       | 2   |
| 5    | 115-133-305 | Bracket, Mounting                           | 2   | 31         | 620-017-115  | Plunger, Actuator                     | 2   |
|      | 115-133-306 | Bracket, Mounting                           | 2   | 32         | 670-047-520  | Retainer, Ball                        | 4   |
|      | 115-133-333 | Bracket, Mounting                           | 2   |            | 670-047-552  | Retainer, Ball                        | 4   |
| 6    | 132-019-360 | Bumper, Diaphragm                           | 2   | 33         | 685-051-120  | Rod, Diaphragm                        | 1   |
| 7    | 135-032-506 | Bushing, Plunger                            | 2   | 34         | 685-052-115  | Rod, Support                          | 2   |
| 8    | 165-099-307 | Cap, Air Inlet                              | 1   |            | 685-052-308  | Rod, Support                          | 2   |
|      | 165-099-309 | Cap, Air Inlet                              | 1   | 35         | 720-010-375  | Seal, Diaphragm Rod                   | 2   |
|      | 165-099-332 | Cap, Air Inlet                              | 1   | 36         | 720-039-600  | Seal, Manifold Spacer                 | 8   |
| 9    | 170-017-115 | Capscrew, Hex HD 5/8-11 x 1.75              | 4   | 37         | 720-043-600  | Seal, Check Valve Assembly            | 8   |
|      | 170-017-308 | Capscrew, Hex HD 5/8-11 x 1.75              | 4   | 38         | 722-076-520  | Seat, Check Valve                     | 4   |
| 10   | 170-052-115 | Capscrew, Hex HD 3/8-16 x 2.25              | 4   |            | 722-076-552  | Seat, Check Valve                     | 4   |
|      | 170-052-308 | Capscrew, Hex HD 3/8-16 x 2.25              | 4   | 39         | 770-055-520  | Spacer, Manifold                      | 4   |
| 11   | 170-111-115 | Capscrew, Hex HD 5/8-11 x 3.25              | 4   |            | 770-055-552  | Spacer, Manifold                      | 4   |
|      | 170-111-308 | Capscrew, Hex HD 5/8-11 x 3.25              | 4   |            | 770-059-520  | Spacer, Manifold (PTFE Overlays Only) | 4   |
| 12   | 170-112-115 | Capscrew, Hex HD 5/8-11 x 3.75              | 32  |            | 770-059-552  | Spacer, Manifold (PTFE Overlays Only) | 4   |
|      | 170-112-308 | Capscrew, Soc HD 5/8-11 x 3.75              | 32  | 40         | 901-047-115  | Washer, Flat 5/8"                     | 140 |
| 13   | 171-004-115 | Capscrew, Soc HD 1/2-13 x 1.25              | 6   |            | 901-047-308  | Washer, Flat 5/8"                     | 140 |
| 14   | 171-053-115 | Capscrew, Soc HD 3/8-16 X 2.75              | 4   | 41         | 901-048-115  | Washer, Flat 3/8"                     | 8   |
|      | 171-053-308 | Capscrew, Soc HD 3/8-16 X 2.75              | 4   |            | 901-048-308  | Washer, Flat 3/8"                     | 8   |
| 15   | 196-151-520 | Chamber, Outer                              | 2   | NOT SHOWN: |              |                                       |     |
|      | 196-151-552 | Chamber, Outer                              | 2   |            | 535-069-000  | Nameplate                             |     |
| 16   | 196-152-307 | Chamber, Inner                              | 2   |            |              |                                       |     |
|      | 196-152-309 | Chamber, Inner                              | 2   |            |              |                                       |     |
|      | 196-152-332 | Chamber, Inner                              | 2   |            |              |                                       |     |

# Spill Containment Option for Virgin PTFE Equipped Pumps Drawing

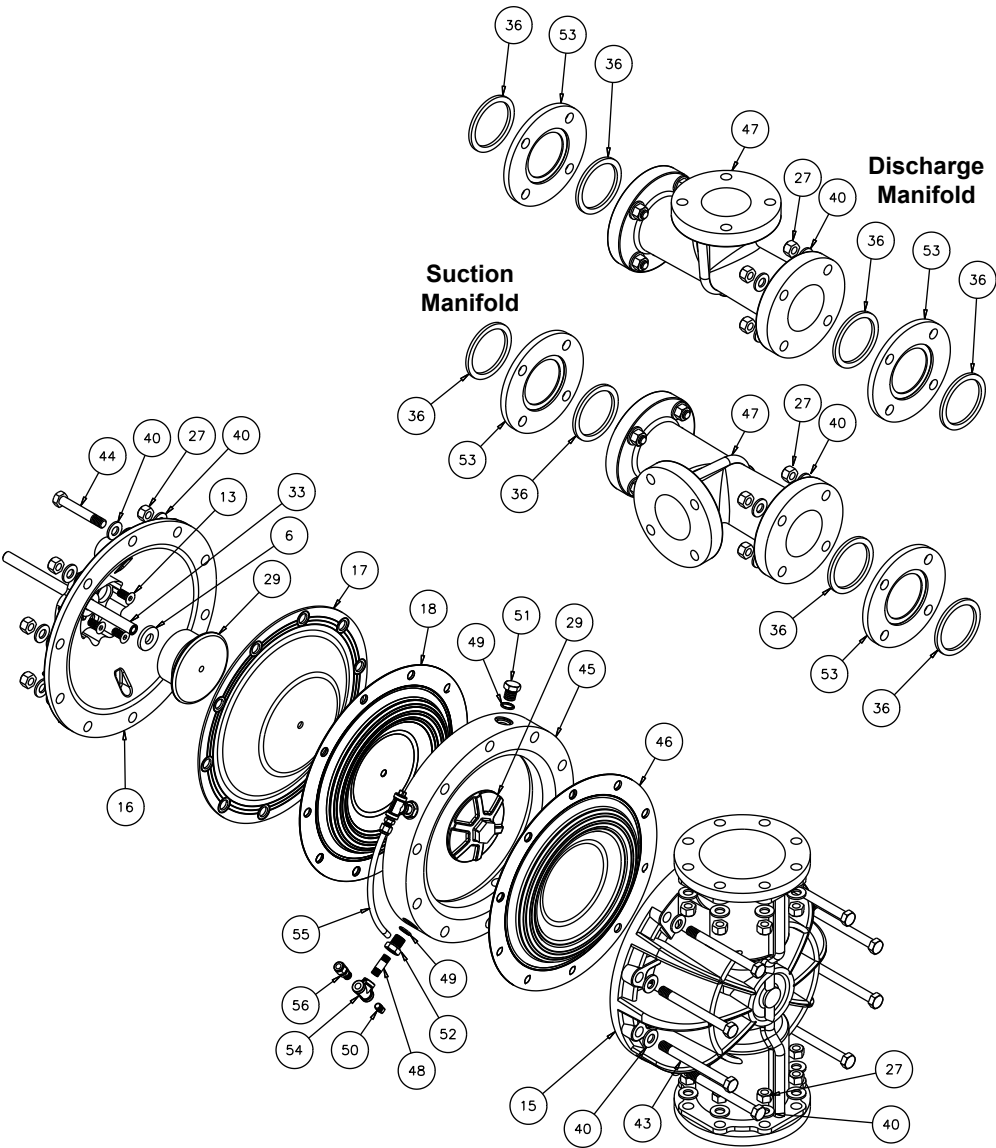

S30 SPILL CONTAINMENT REPAIR PARTS LIST FOR  
VIRGIN PTFE EQUIPPED PUMPS

| ITEM | PART NUMBER  | DESCRIPTION                                  | QTY |
|------|--------------|----------------------------------------------|-----|
| 1    | 031-146-000  | Air Valve Assembly<br>(replaces 031-140-000) | 1   |
|      | 031-147-000  | Air Valve Assembly<br>(replaces 031-141-000) | 1   |
| 43   | 170-113-115  | Capscrew, Hex HD 5/8-11 x 6.00               | 16  |
|      | 170-113-308  | Capscrew, Hex HD 5/8-11 x 6.00               | 16  |
| 44   | 170-115-115  | Capscrew, Hex HD 5/8-11 x 4.00               | 4   |
|      | 170-115-308  | Capscrew, Hex HD 5/8-11 x 4.00               | 4   |
| 45   | 196-156-552  | Chamber, Spill Containment                   | 2   |
|      | 196-156-600  | Chamber, Spill Containment                   | 2   |
| 46   | 286-079-600  | Diaphragm, Pumping                           | 2   |
| 47   | 518-135-520  | Manifold                                     | 2   |
|      | 518-135-520E | Manifold, 80mm DIN                           | 2   |
|      | 518-135-552  | Manifold                                     | 2   |
|      | 518-135-552E | Manifold, 80mm DIN                           | 2   |
| 48   | 538-022-110  | Nipple, Pipe                                 | 4   |
|      | 538-022-308  | Nipple, Pipe                                 | 4   |
| 49   | 560-078-611  | O-Ring                                       | 8   |
| 50   | 618-003-110  | Plug, Pipe                                   | 4   |
|      | 618-003-308  | Plug, Pipe                                   | 4   |
| 51   | 618-025-110  | Plug, Boss                                   | 4   |
|      | 618-025-308  | Plug, Boss                                   | 4   |
| 52   | 618-031-110  | Plug, Boss                                   | 4   |
|      | 618-031-308  | Plug, Boss                                   | 4   |
| 53   | 770-061-600  | Spacer, Manifold                             | 4   |
|      | 770-061-552  | Spacer, Manifold                             | 4   |
| 54   | 835-005-110  | Tee, Pipe                                    | 4   |
|      | 835-005-308  | Tee, Pipe                                    | 4   |
| 55   | 860-057-606  | Tube, Sight                                  | 2   |
| 56   | 866-060-110  | Connector, Tube                              | 4   |

## SPILL CONTAINMENT FOR PTFE EQUIPPED PUMPS CONCEPT

The Spill Containment option prevents the air end components from being contaminated or damaged when a pumping diaphragm ruptures while pumping caustic or toxic materials. It also helps to protect the environment. With the installation of optional leak detectors (either mechanical or electronic) the diaphragm rupture can be detected. The pump can then be shut down and repaired before any caustic or toxic materials can enter the air end and be exhausted into the surrounding environment.

## SPILL CONTAINMENT OPTION DIAPHRAGM SERVICING

To service the diaphragms first shut off the suction, then shut off the discharge lines to the pump. Next shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump. Drain any remaining pumped liquid from the pump. Remove the pump before servicing.

Next, drain the fluid from the Spill Containment chambers. This can be done by removing the bottom plug (item 50) from each Spill Containment chamber.

After the fluid from the Spill Containment chambers has been drained, the wet end components can now be removed. See diaphragm servicing section for detailed instructions. The Spill Containment option has two additional virgin PTFE pumping diaphragms (item 46).

## FILLING SPILL CONTAINMENT CHAMBERS WITH LIQUID

THE CHAMBERS ARE FILLED WITH WATER AT THE FACTORY.

If you prefer to substitute another liquid, to prevent system contamination consult the factory first to determine compatibility of the substitute with pump construction.

Follow the steps listed here to replace the liquid in the pump after disassembly or liquid loss:

1. Drain the fluid in the Spill Containment chambers by removing the bottom two boss plugs (items 50). Replace the bottom two boss plugs after the fluid is drained.

2. Remove the eight capscrews (item 11) fastening the discharge manifold and elbows to the outer chambers (items 15). The discharge manifolds and elbows can now be removed.

3. Remove the top two boss plugs (items 50). The Spill Containment chambers are filled through the exposed ports.

4. Apply air pressure to the air distribution valve. Install safety clip (item 1-F) into the smaller unthreaded hole in one end cap. This locks the valve spool to one side, keeping the pump from shifting.

5. Face the side of the pump with the installed safety clip. If the safety clip is installed in the top end cap, fill the left spill containment chamber. If the safety clip is installed on the bottom end cap, fill the right Spill Containment chamber. The volume of fluid is 3770 ml (127.5 fl. oz.). It is important that

the exact amount of fluid is used. Too little or too much fluid causes premature diaphragm failure and erratic pumping.

6. Loosely reinstall one boss plug to the filled Spill Containment chamber.

7. Shut off air supply. Remove safety clip. Adjust the air line regulator so that air pressure slowly fills the pump. The diaphragm expands, forcing the fluid in the chamber to be slowly displaced. When the pump shifts to the opposite side, quickly install the safety clip.

8. Loosen the top boss plug on the filled chambers. This allows fluid in the chamber to purge trapped air from the chamber. This can be seen by watching the column of fluid in the sight tube. When fluid appears at the top of the port, quickly tighten the boss plug. Fluid loss of 1 to 2ml is acceptable.

9. Tilt the pump so the uppermost pipe tee (item 53) is in the vertical position. Loosen the pipe plug (item 49). This will allow trapped air to purge through the pipe tee. When fluid appears at the tee opening, reinstall the pipe plug.

**NOTE:** If all air is not purged using this procedure, remove the check valve components from the top port of the outer chamber (item 15). Apply manual pressure to the pumping diaphragm by inserting a blunt instrument into the top port of the outer chamber and applying pressure to the diaphragm. Loosen the pipe plug (item 49) allowing the fluid to purge any remaining trapped air. Reinstall the plug.

10. Repeat steps 5 through 9 to fill opposite Spill Containment chamber.

11. Reinstall the check valve components, discharge manifold and elbows to the pump. The pump is now ready for operation.




### **! IMPORTANT**

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain*

*this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

# Spill Containment Option for TPE Equipped Pumps Drawing

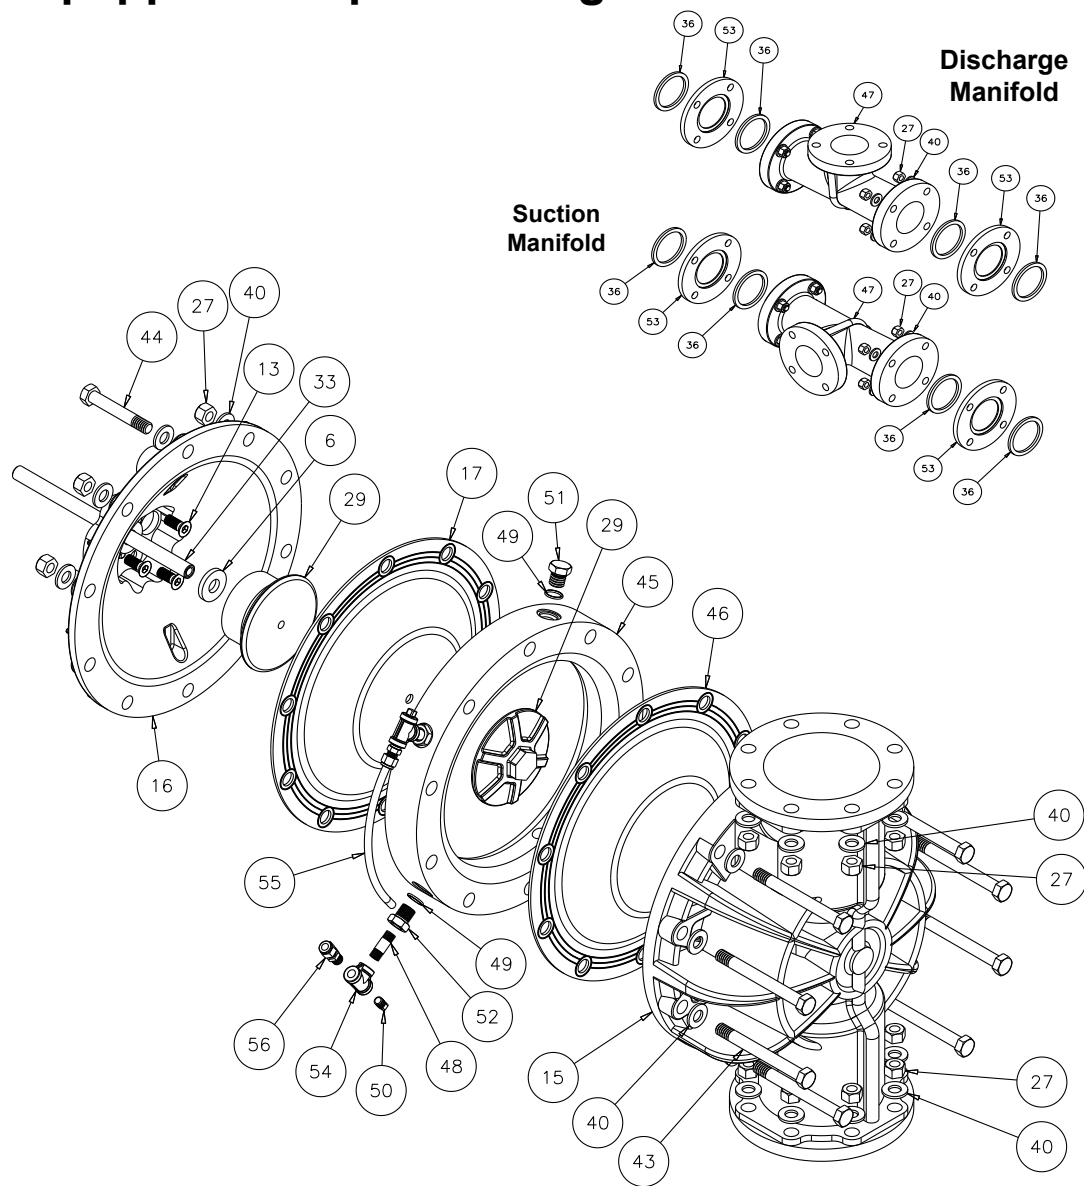

## S30 SPILL CONTAINMENT FOR TPE EQUIPPED PUMPS REPAIR PARTS LIST

| ITEM | PART NUMBER  | DESCRIPTION                                  | QTY |
|------|--------------|----------------------------------------------|-----|
| 1    | 031-146-000  | Air Valve Assembly<br>(replaces 031-140-000) | 1   |
|      | 031-147-000  | Air Valve Assembly<br>(replaces 031-141-000) | 1   |
| 43   | 170-113-115  | Capscrew, Hex HD 5/8-11 x 6.00               | 16  |
|      | 170-113-308  | Capscrew, Hex HD 5/8-11 x 6.00               | 16  |
| 44   | 170-115-115  | Capscrew, Hex HD 5/8-11 x 4.00               | 4   |
|      | 170-115-308  | Capscrew, Hex HD 5/8-11 x 4.00               | 4   |
| 45   | 196-156-552  | Chamber, Spill Containment                   | 2   |
|      | 196-156-600  | Chamber, Spill Containment                   | 2   |
| 46   | 286-080-354  | Diaphragm, Pumping                           | 2   |
| 47   | 518-135-520  | Manifold, Spill Containment                  | 2   |
|      | 518-135-520E | Manifold, 80mm DIN                           | 2   |
|      | 518-135-552  | Manifold, Spill Containment                  | 2   |
|      | 518-135-552E | Manifold, 80mm DIN                           | 2   |
| 48   | 538-022-110  | Pipe, Nipple                                 | 4   |
|      | 538-022-308  | Pipe, Nipple                                 | 4   |
| 49   | 560-078-611  | O-ring                                       | 8   |
| 50   | 618-003-110  | Plug, Pipe                                   | 4   |
|      | 618-003-308  | Plug, Pipe                                   | 4   |
| 51   | 618-025-110  | Plug, Boss                                   | 4   |
|      | 618-025-308  | Plug, Boss                                   | 4   |
| 52   | 618-031-110  | Plug, Boss                                   | 4   |
|      | 618-031-308  | Plug, Boss                                   | 4   |
| 53   | 770-061-600  | Spacer, Manifold                             | 4   |
|      | 770-061-552  | Spacer, Manifold                             | 4   |
| 54   | 835-005-110  | Tee, Pipe                                    | 4   |
|      | 835-005-308  | Tee, Pipe                                    | 4   |
| 55   | 860-057-606  | Tube, Sight                                  | 2   |
| 56   | 866-060-110  | Connector, Tube                              | 4   |

## SPILL CONTAINMENT FOR TPE EQUIPPED PUMPS CONCEPT

The Spill Containment option prevents the air end components from being contaminated or damaged when a pumping diaphragm ruptures while pumping caustic or toxic materials. It also helps to protect the environment. With the installation of optional leak detectors (either mechanical or electronic) the diaphragm rupture can be detected. The pump can then be shut down and repaired before any caustic or toxic materials can enter the air end and be exhausted into the surrounding environment.

## SPILL CONTAINMENT OPTION DIAPHRAGM SERVICING

To service the diaphragms first shut off the suction, then shut off the discharge lines to the pump. Next shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump. Drain any remaining pumped liquid from the pump. Remove the pump before servicing.

Next, drain the fluid from the Spill Containment chambers. This can be done by removing the bottom plug (item 50) from each Spill Containment chamber.

After the fluid from the Spill Containment chambers has been drained, the wet end components can now be removed. See diaphragm servicing section for detailed instructions. The Spill Containment option has two additional TPE pumping diaphragms (item 46).

## FILLING SPILL CONTAINMENT CHAMBERS WITH LIQUID

THE CHAMBERS ARE FILLED WITH WATER AT THE FACTORY.

If you prefer to substitute another liquid, to prevent system contamination consult the factory first to determine compatibility of the substitute with pump construction.

Follow the steps listed here to replace the liquid in the pump after disassembly or liquid loss:

1. Drain the fluid in the Spill Containment chambers by removing the bottom two boss plugs (items 50). Replace the bottom two boss plugs after the fluid is drained.

2. Remove the eight capscrews (item 11) fastening the discharge manifold and elbows to the outer chambers (items 15). The discharge manifolds and elbows can now be removed.

3. Remove the top two boss plugs (items 50). The Spill Containment chambers are filled through the exposed ports.

4. Apply air pressure to the air distribution valve. Install safety clip (item 1-F) into the smaller unthreaded hole in one end cap. This locks the valve spool to one side, keeping the pump from shifting.

5. Face the side of the pump with the installed safety clip. If the safety clip is installed in the top end cap, fill the left Spill Containment chamber. If the safety clip is installed on the bottom end cap, fill the right Spill Containment chamber. The volume of fluid is 3770 ml (127.5 fl. oz.). It is important that the

exact amount of fluid is used. Too little or too much fluid causes premature diaphragm failure and erratic pumping.

6. Loosely reinstall one boss plug to the filled Spill Containment chamber.

7. Shut off air supply. Remove safety clip. Adjust the air line regulator so that air pressure slowly fills the pump. The diaphragm expands, forcing the fluid in the chamber to be slowly displaced. When the pump shifts to the opposite side, quickly install the safety clip.

8. Loosen the top boss plug on the filled chambers. This allows fluid in the chamber to purge trapped air from the chamber. This can be seen by watching the column of fluid in the sight tube. When fluid appears at the top of the port, quickly tighten the boss plug. Fluid loss of 1 to 2ml is acceptable.

9. Tilt the pump so the uppermost pipe tee (item 53) is in the vertical position. Loosen the pipe plug (item 49). This will allow trapped air to purge through the pipe tee. When fluid appears at the tee opening, reinstall the pipe plug.

**NOTE:** If all air is not purged using this procedure, remove the check valve components from the top port of the outer chamber (item 15). Apply manual pressure to the pumping diaphragm by inserting a blunt instrument into the top port of the outer chamber and applying pressure to the diaphragm. Loosen the pipe plug (item 49) allowing the fluid to purge any remaining trapped air. Reinstall the plug.

10. Repeat steps 5 through 9 to fill opposite Spill Containment chamber.



11. Reinstall the check valve components, discharge manifold and elbows to the pump. The pump is now ready for operation.



### **! IMPORTANT**

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

# Air Distribution Valve Assembly

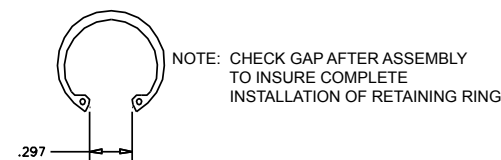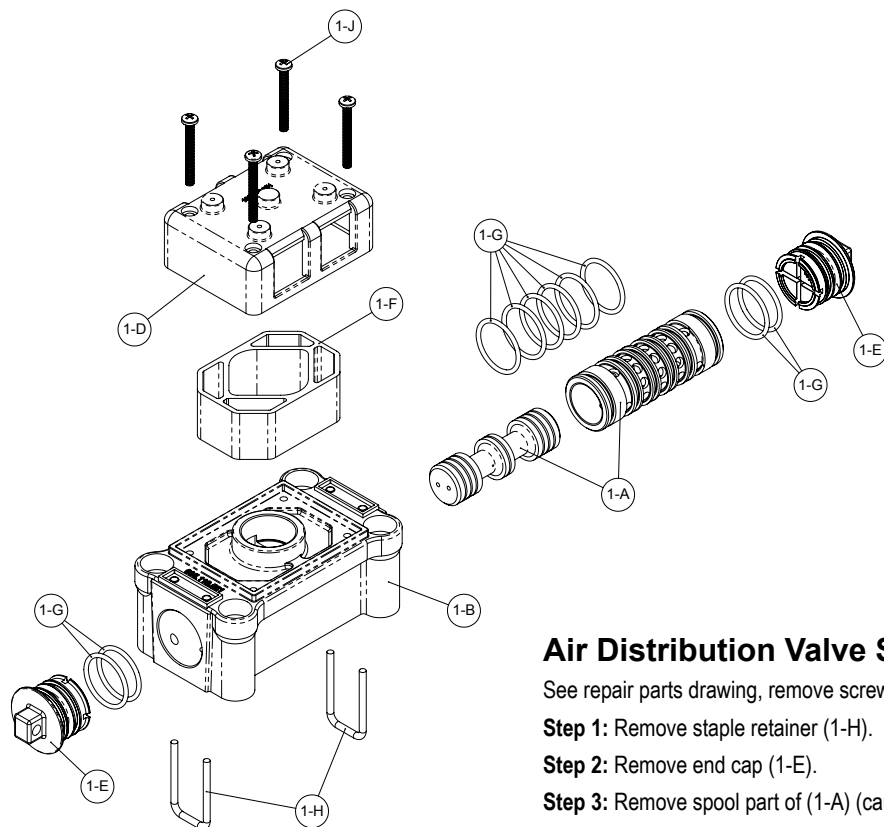

## Air Valve Assembly Parts List

| Item | Part Number  | Description          | Qty |
|------|--------------|----------------------|-----|
| 1    | 031-140-000* | Air Valve Assembly   | 1   |
| 1-A  | 031-139-000  | Sleeve and Spool Set | 1   |
| 1-B  | 095-119-551  | Body, Air Valve      | 1   |
| 1-D  | 165-096-551  | Cap, Muffer          | 1   |
| 1-E  | 165-140-551  | Cap, End             | 2   |
| 1-F  | 530-028-550  | Muffer               | 1   |
| 1-G  | 560-020-360  | O-Ring               | 10  |
| 1-H  | 675-068-115  | Staple               | 2   |
| 1-J  | 710-015-115  | Screw, Self-tapping  | 4   |

### For Pumps with Piped Exhaust:

|                                                                     |              |                    |   |
|---------------------------------------------------------------------|--------------|--------------------|---|
| 1                                                                   | 031-141-000* | Air Valve Assembly | 1 |
| (Includes all items used on 031-140-000 minus items 1-D, 1-F & 1-J) |              |                    |   |

## Air Distribution Valve Servicing

See repair parts drawing, remove screws.

**Step 1:** Remove staple retainer (1-H).

**Step 2:** Remove end cap (1-E).

**Step 3:** Remove spool part of (1-A) (caution: do not scratch).

**Step 4:** Press sleeve (1-A) from body (1-B).

**Step 5:** Inspect O-Ring (1-H) and replace if necessary.

**Step 6:** Lightly lubricate O-Rings (1-H) on sleeve (1-A).

**Step 7:** Press sleeve (1-A) into body (1-B).

**Step 8:** Reassemble in reverse order, starting with step 3.

**Note:** Sleeve and spool (1-A) set is match ground to a specified clearance sleeve and spools (1-A) cannot be interchanged.

## IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

## Air Valve Assembly Parts List

| Item | Part Number | Description          | Qty |
|------|-------------|----------------------|-----|
| 1    | 031-140-001 | Air Valve Assembly   | 1   |
| 1-A  | 031-139-000 | Sleeve and Spool Set | 1   |
| 1-B  | 095-119-551 | Body, Air Valve      | 1   |
| 1-C  | 132-029-552 | Bumper               | 2   |
| 1-D  | 165-096-559 | Cap, Muffer          | 1   |
| 1-E  | 165-140-551 | Cap, End             | 2   |
| 1-F  | 530-028-550 | Muffer               | 1   |
| 1-G  | 560-020-360 | O-Ring               | 10  |
| 1-H  | 675-068-115 | Staple               | 2   |
| 1-J  | 710-015-115 | Screw, Self-tapping  | 4   |

### For Pumps with Metal Mesh Muffer or Piped Exhaust:

|                                                                     |             |                    |   |
|---------------------------------------------------------------------|-------------|--------------------|---|
| 1                                                                   | 031-141-001 | Air Valve Assembly | 1 |
| (Includes all items used on 031-140-001 minus items 1-D, 1-F & 1-J) |             |                    |   |



**ATEX Compliant**

\* For pumps with stainless brass sleeve and spool set use replace last three digits with 162

## AIR DISTRIBUTION VALVE SERVICING

To service the air valve first shut off the compressed air, bleed the pressure from the pump, and disconnect the air supply line from the pump.

**STEP #1:** See Composite Repair and Parts Drawing.

Using a  $\frac{5}{16}$ " Allen wrench, remove the four hex socket capscrews (item 14) and four flat washers (item 41). Remove the air valve assembly from the pump.

Remove and inspect gasket (item 23) for cracks or damage. Replace gasket if needed.

**STEP #2:** Disassembly of the air valve.

To access the internal air valve components first remove the two retaining rings (item 1-H) from each end of the air valve assembly using clip ring pliers.

Next remove the two end caps (item 1-E). Inspect the o-rings (item 1-G) for cuts or wear. Replace the o-rings if necessary.

Remove the two bumpers (item 1-C). Inspect the bumpers for cuts, wear or abrasion. Replace if necessary.

Remove the spool (part of item 1-A) from the sleeve. Be careful not to scratch or damage the outer diameter of the spool. Wipe spool with a soft cloth and inspect for scratches or wear.

Inspect the inner diameter of the sleeve (part of item 1-A) for dirt, scratches, or other contaminants. Remove the sleeve if needed and replace both the sleeve and spool with a new sleeve and spool set (item 1-A).

**STEP #3:** Reassembly of the air valve.

Install one end cap (item 1-E) with an o-ring (item 1-G) and one bumper (item 1-C) into one end of the air valve body (item 1-B). Install one retaining ring (item 1-H) into the groove on the same end.

Remove the new sleeve and spool set (item 1-A) from the plastic bag. Carefully remove the spool from the sleeve. Install the six o-rings (item 1-G) into the six grooves on the sleeve. Apply a light coating of grease to the o-rings before installing the sleeve into the valve body (item 1-B), align the slots in the sleeve with the slots in the valve body. Insert the spool into the sleeve. Be careful not to scratch or damage the spool during installation. Push the spool in until it touches the bumper on the opposite end.

Install the remaining bumper, end cap with o-ring, and retaining ring.

Fasten the air valve assembly (item 1) and gasket (item 23) to the pump.

Connect the compressed air line to the pump. The pump is now ready for operation.




### IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

# Air Valve with Stroke Indicator Assembly

**Note:** Stroke Indicator is standard on Spill Containment models

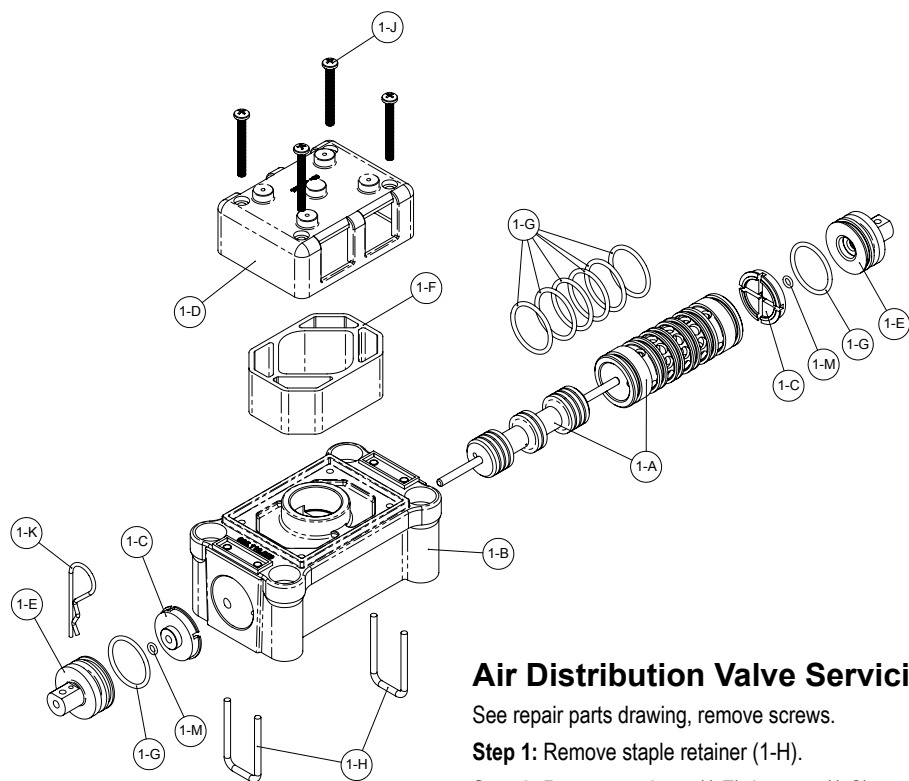


## Air Distribution Valve Servicing

See repair parts drawing, remove screws.

- Step 1:** Remove staple retainer (1-H).
- Step 2:** Remove end cap (1-E), bumper (1-C).
- Step 3:** Remove spool part of (1-A) (caution, do not scratch).
- Step 4:** Press sleeve (1-A) from body (1-B).
- Step 5:** Inspect O-Ring (1-G) and replace if necessary.
- Step 6:** Lightly lubricate O-Rings (1-G) on sleeve (1-A).
- Step 7:** Press sleeve (1-A) into body (1-B).
- Step 8:** Reassemble in reverse order.

**Note:** Sleeve and spool (1-A) set is match ground to a specified clearance sleeve and spools (1-A) cannot be interchanged.

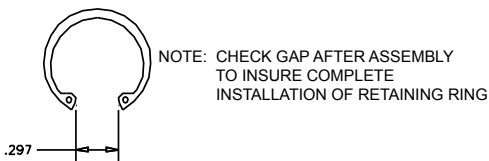

## Air Valve Assembly Parts List

| Item                                                                                  | Part Number | Description                 | Qty |
|---------------------------------------------------------------------------------------|-------------|-----------------------------|-----|
|  1 | 031-146-000 | Air Valve Assembly          | 1   |
| 1-A                                                                                   | 031-143-000 | Sleeve and Spool Set w/Pins | 1   |
| 1-B                                                                                   | 095-119-559 | Body, Air Valve             | 1   |
| 1-C                                                                                   | 132-039-551 | Bumper                      | 2   |
| 1-D                                                                                   | 165-096-559 | Cap, Muffer                 | 1   |
| 1-E                                                                                   | 165-156-147 | Cap, End                    | 2   |
| 1-F                                                                                   | 530-028-550 | Muffer                      | 1   |
| 1-G                                                                                   | 560-020-360 | O-Ring                      | 8   |
| 1-H                                                                                   | 675-068-115 | Staple                      | 2   |
| 1-J                                                                                   | 710-015-115 | Screw, Self-Tapping         | 4   |
| 1-K                                                                                   | 210-008-330 | Clip, Safety                | 1   |
| 1-M                                                                                   | 560-029-360 | O-Ring                      | 2   |

### For Pumps with PTFE Coated Hardware:

|     |             |                     |   |
|-----|-------------|---------------------|---|
| 1   | 031-146-002 | Air Valve Assembly  | 1 |
| 1-J | 710-015-308 | Screw, Self Tapping | 4 |

(includes all other items on 031-146-000 above)

### For Pumps with Piped Exhaust:

|                                                                                         |             |                    |   |
|-----------------------------------------------------------------------------------------|-------------|--------------------|---|
|  1 | 031-147-000 | Air Valve Assembly | 1 |
|-----------------------------------------------------------------------------------------|-------------|--------------------|---|

(includes all items on 031-146-000 minus 1-D, 1-F, & 1-J)



**ATEX Compliant**

## AIR DISTRIBUTION VALVE WITH STROKE INDICATOR OPTION SERVICING

To service the air valve first shut off the compressed air, bleed the pressure from the pump, and disconnect the air supply line from the pump.

**STEP #1:** See Composite Repair and Parts Drawing.

Using a  $\frac{5}{16}$ " Allen wrench, remove the four hex socket capscrews (item 14) and four flat washers (item 41). Remove the air valve assembly from the pump.

Remove and inspect gasket (item 23) for cracks or damage. Replace gasket if needed.

**STEP #2:** Disassembly of the air valve.

To access the internal air valve components first remove the two retaining rings (item 1-H) from each end of the air valve assembly using clip ring pliers.

Next remove the two end caps (item 1-E). Inspect the o-rings (item 1-G) for cuts or wear. Replace the o-rings if necessary.

Remove the two bumpers (item 1-C). Inspect the bumper for cuts, wear or abrasions. Replace if necessary.

Remove the spool (part of item 1-C) from the sleeve. Be careful not to scratch or damage the outer diameter of the spool. Wipe spool with a soft cloth and inspect for scratches or wear.

Inspect the inner diameter of the sleeve (part of item 1-A) for dirt, scratches, or other contaminants. Remove the sleeve if needed and replace both the sleeve and spool with a new sleeve and spool set (item 1-A).

**STEP #3:** Reassembly of the air valve.

Install one bumper (item 1-C) and one end cap (item 1-E) with an o-ring (item 1-G) into one end of the air valve body (item 1-B). Install one retaining ring (item 1-H) into the groove on the same end. Insert the safety clip (item 1-K) through the small unthreaded hole in the end cap.

Remove the new sleeve and spool set (item 1-A) from the plastic bag. Carefully remove the spool from the sleeve. Install the six o-rings (item 1-G) into the six grooves on the sleeve. Apply a light coating of grease to the o-rings before installing the sleeve into the valve body (item 1-B), align the slots in the sleeve with the slots in the valve body. Insert the spool into the sleeve. Be careful not to scratch or damage the spool during installation. Push the spool in until the pin touches the safety clip on the opposite end.

Install the remaining bumper, end cap with o-ring, and retaining ring.

Fasten the air valve assembly (item 1) and gasket (item 23) to the pump.

Connect the compressed air line to the pump. The pump is now ready for operation.



### IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

# Solenoid Shifted Air Valve Drawing


## SOLENOID SHIFTED AIR VALVE PARTS LIST

(Includes all items used on Composite Repair Parts List except as shown)

| ITEM | PART NUMBER | DESCRIPTION                    | QTY |
|------|-------------|--------------------------------|-----|
| 57   | 893-097-000 | Solenoid Valve, NEMA4          | 1   |
| 58   | 219-001-000 | Solenoid Coil, 24VDC           | 1   |
|      | 219-004-000 | Solenoid Coil, 24VAC/12VDC     | 1   |
|      | 219-002-000 | Solenoid Coil, 120VAC          | 1   |
|      | 219-003-000 | Solenoid Coil, 240VAC          | 1   |
| 59   | 241-001-000 | Connector, conduit             | 1   |
| 60   | 170-061-115 | Capscrew, Hex HD 3/8-16 x 1.75 | 4   |
| 61   | 618-052-506 | Plug                           | 2   |

## For Explosion Proof Solenoid Valve

|    |             |                             |   |
|----|-------------|-----------------------------|---|
| 58 | 219-009-001 | Solenoid Coil, 120VAC 60 Hz | 1 |
|    | 219-009-002 | Solenoid Coil, 240VAC 60 HZ | 1 |
|    | 219-009-003 | Solenoid Coil, 12VDC        | 1 |
|    | 219-009-004 | Solenoid Coil, 24VDC        | 1 |
|    | 219-009-005 | Solenoid Coil, 110VAC 50 Hz | 1 |
|    | 219-009-006 | Solenoid Coil, 230VAC 50 Hz | 1 |

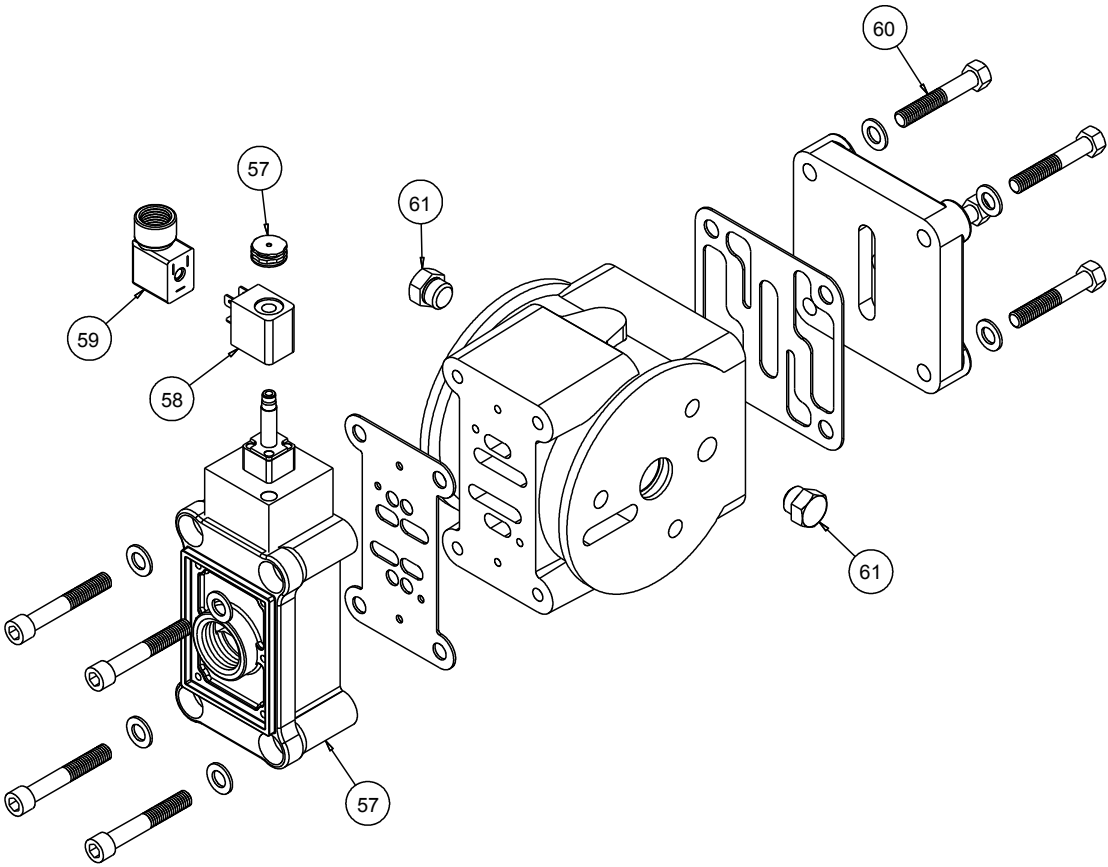

## SOLENOID SHIFTED AIR DISTRIBUTION VALVE OPTION


Warren Rupp's solenoid shifted, air distribution valve option utilizes electrical signals to precisely control your SANDPIPER's speed. The solenoid coil is connected to a customer - supplied control. Compressed air provides the pumping power, while electrical signals control pump speed (pumping rate).

### OPERATION


The Solenoid Shifted SANDPIPER has a solenoid operated, air distribution valve in place of the standard SANDPIPER's pilot operated, air distribution valve. Where a pilot valve is normally utilized to cycle the pump's air distribution valve, an electric solenoid is utilized. As the solenoid is powered, one of the pump's air chambers is pressurized while the other chamber is exhausted. When electric power is turned off, the solenoid shifts and the pressurized chamber is exhausted while the other chamber is pressurized. By alternately applying and removing power to the solenoid, the pump cycles much like a standard SANDPIPER pump, with one exception. This option provides a way to precisely control and monitor pump speed.

### BEFORE INSTALLATION

Before wiring the solenoid, make certain it is compatible with your system voltage.

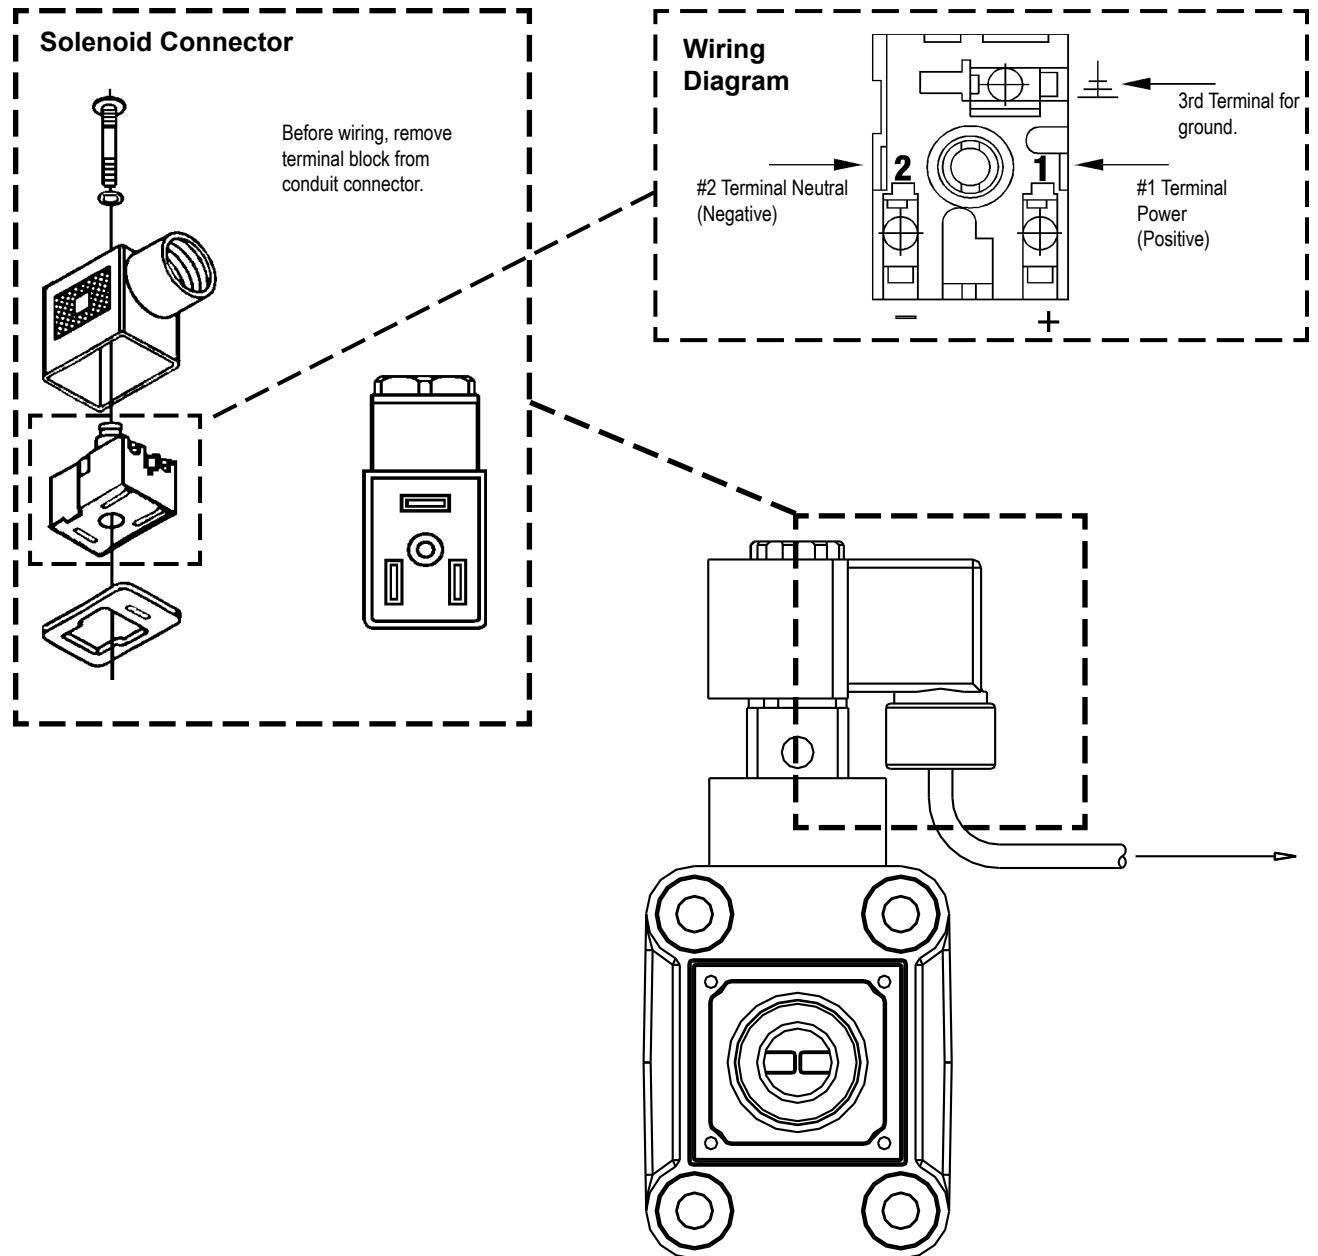

# Pilot Valve Assembly Drawing

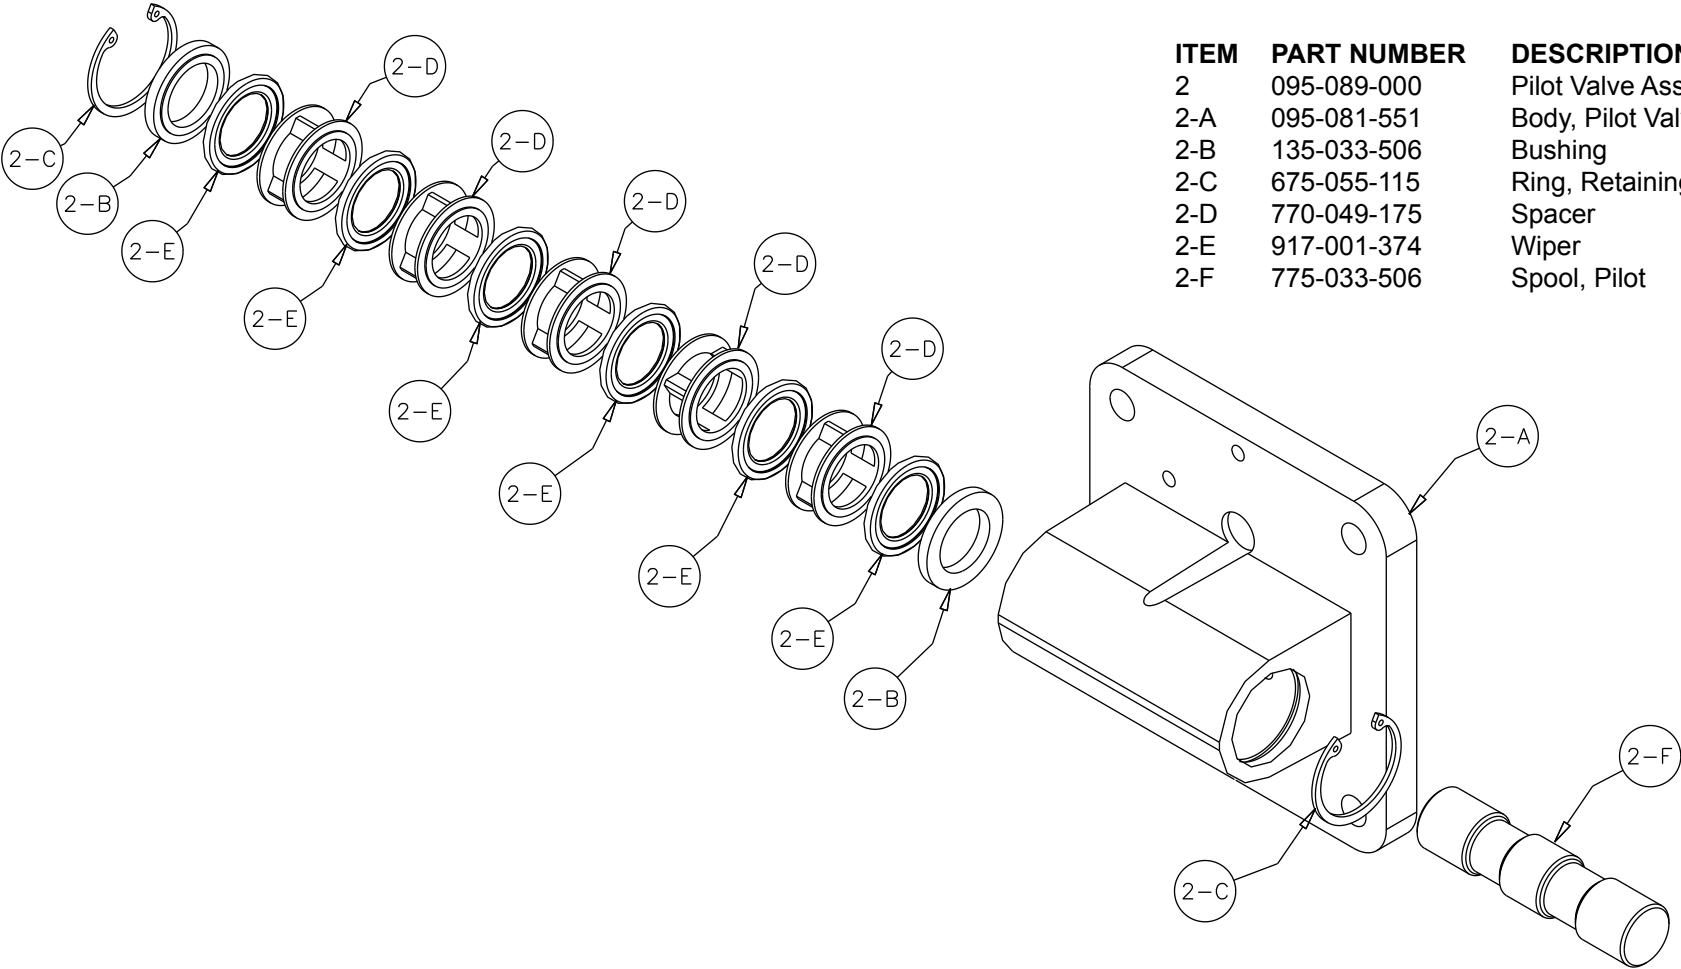

## PILOT VALVE ASSEMBLY PARTS LIST

| ITEM | PART NUMBER | DESCRIPTION          | QTY |
|------|-------------|----------------------|-----|
| 2    | 095-089-000 | Pilot Valve Assembly | 1   |
| 2-A  | 095-081-551 | Body, Pilot Valve    | 1   |
| 2-B  | 135-033-506 | Bushing              | 2   |
| 2-C  | 675-055-115 | Ring, Retaining      | 2   |
| 2-D  | 770-049-175 | Spacer               | 5   |
| 2-E  | 917-001-374 | Wiper                | 6   |
| 2-F  | 775-033-506 | Spool, Pilot         | 1   |

## PILOT VALVE SERVICING

To service the pilot valve first shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump. Insert the safety clip (item 1-F from Air Distribution Valve assembly drawing) into the smaller unthreaded holes in the end cap (item 1-E from air distribution valve assembly drawing).

### Step #1: See PUMP ASSEMBLY DRAWING.

Using a  $\frac{9}{16}$ " wrench or socket, remove the four capscrews (items 10) and four flat washers (items 41). Remove the air inlet cap (item 8) and air inlet gasket (item 20). The pilot valve assembly (item 2) can now be removed for inspection or service.

### Step #2: Disassembly of the pilot valve.

Remove the pilot valve spool (item 2-F). Wipe clean, and inspect for dirt, scratches or wear. Replace the spool if necessary.

Remove the two retaining rings (items 2-C) from each end of the pilot valve body using clip ring pliers.

Remove the two pilot valve bushings (items 2-B), five spacers (items 2-D), and six spool wipers (items 2-E) by pushing gently from other end of the pilot valve body. Inspect the wipers for cuts and/or wear. Replace any wipers as necessary.

### Step #3: Re-assembly of the pilot valve.

First install a spiral retaining ring to one end of the pilot valve body. Install one bushing making sure the step side faces toward the wiper. Apply a light coating of grease to the outside diameter of each wiper. Next, gently push in the wipers and spacers until they are against the installed retaining ring in the opposite end of the pilot valve body. Install the remaining bushing making sure the step side faces the wiper. Install the remaining retaining ring using clip ring pliers.

Apply a light coating of grease to the inner diameter of each wiper. Also apply a light coating of grease to the outer diameter of the pilot valve spool and gently push the spool through each wiper.

### Step #4: Inspect the actuator plungers.

See PUMP ASSEMBLY DRAWING.

The actuator plungers (items 31) can be reached through the stem cavity of the pilot valve in the intermediate assembly (item 4).

Remove the plungers (items 31) from the bushings (item 7) in each end of the cavity. Inspect the installed o-ring (items 28) for cuts and/or wear. Replace the o-rings if necessary. Apply a light coating of grease to each o-ring and re-install the plungers in to the bushings. Push the plungers in as far as they will go.

### Step #5: Re-install the pilot valve assembly into the intermediate assembly.

Be careful to align the ends of the stem between the plungers when inserting the stem of the pilot valve into the cavity of the intermediate.

Re-install the gasket (item 20), air inlet cap (item 8), capscrews and washers (items 10 and 39).

Connect the air supply to the pump. Remove the safety clip (item 1-F) from the end cap (item 1-E). The pump is now ready for operation.





## ! IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

# Diaphragm Service Drawing, Non-Overlay

# Diaphragm Service Drawing, with Overlay

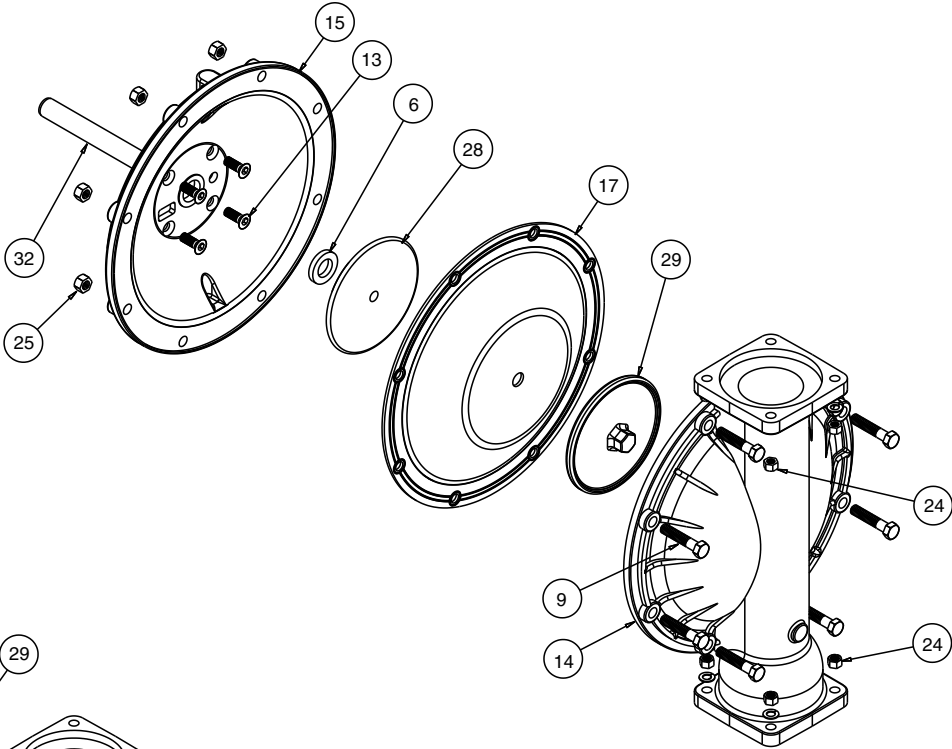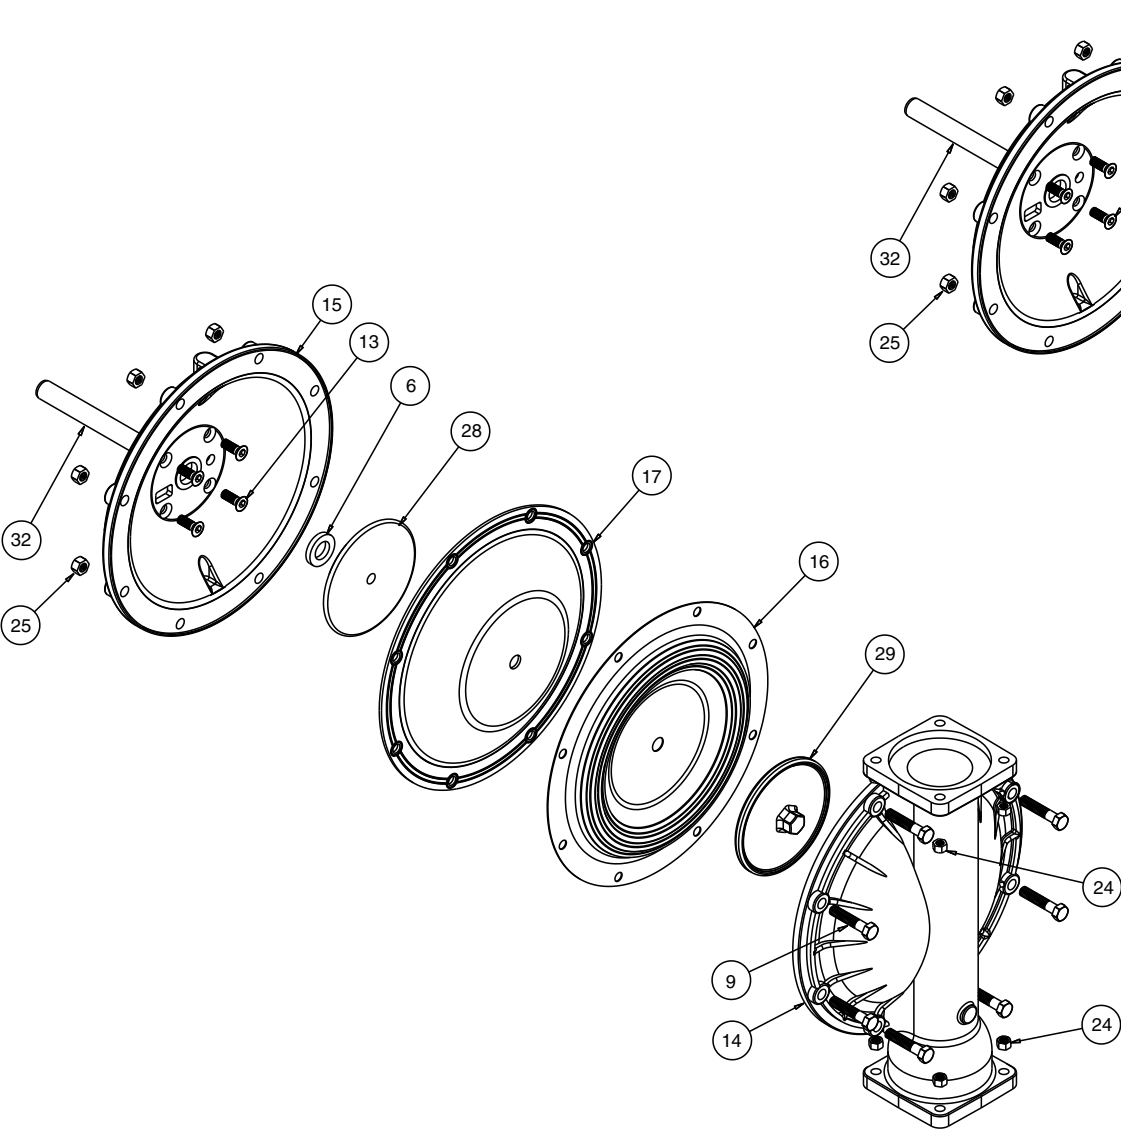

## DIAPHRAGM SERVICING

To service the diaphragms first shut off the suction, then shut off the discharge lines to the pump. Shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump. Drain any remaining liquid from the pump.

**Step #1:** See the pump composite repair parts drawing, and the diaphragm servicing illustration.

Using a  $\frac{9}{16}$ " wrench or socket, remove the 16 capscrews (items 11), hex nuts and washers that fasten the elbows (items 19) to the outer chambers (items 15). Remove the elbows with the manifolds and spacers attached.

**Step #2:** Removing the outer chambers.

Using a  $\frac{9}{16}$ " wrench or socket, remove the 20 capscrews (items 9 & 12), hex nuts and washers that fasten the outer chambers, diaphragms, and inner chambers (items 16) together.

**Step #3:** Removing the diaphragm assemblies.

Use a  $1\frac{3}{8}$ " (35mm) wrench or six pointed socket to remove the diaphragm assemblies (outer plate, diaphragm, and inner plate) from the diaphragm rod (item 33) by turning counterclockwise.

Insert a 1/4-20 capscrow or set screw into the smaller tapped hole in the inner diaphragm plate (item 30). Insert the protruding stud and the 1/4-20 fastener loosely into a vise. Use a

$1\frac{3}{8}$ " wrench or socket to remove the outer diaphragm plate (item 29) by turning counterclockwise. Inspect the diaphragm (item 17) for cuts, punctures, abrasive wear or chemical attack. Replace the diaphragms if necessary.

**Step #4:** Installing the diaphragms.

Push the threaded stud of the outer diaphragm plate through the center hole of the diaphragm. Thread the inner plate clockwise onto the stud. Use a torque wrench to tighten the diaphragm assembly together to 480 in Lbs. (54.23 Newton meters). Allow a minimum of 15 minutes to elapse after torquing, then re-torque the assembly to compensate for stress relaxation in the clamped assembly.

**Step #5:** Installing the diaphragm assemblies to the pump.

Make sure the bumper (item 6) is installed over the diaphragm rod.

Thread the stud of the one diaphragm assembly clockwise into the tapped hole at the end of the diaphragm rod (item 33) until the inner diaphragm plate is flush to the end of the rod. Insert rod into pump.

Align the bolt holes in the diaphragm with the bolt pattern in the inner chamber (item 16). Make sure the molded directional arrows on the diaphragm point vertically.

Fasten the outer chamber (item 15) to the pump, using the capscrews (items 9 & 12), hex nuts and flat washers.

On the opposite side of the pump, pull the diaphragm rod out as far as possible. Make sure the bumper (item

6) is installed over the diaphragm rod.

Thread the stud of the remaining diaphragm assembly clockwise into the tapped hole at the end of the diaphragm rod (item 33) as far as possible and still allow for alignment of the bolt holes in the diaphragm with the bolt pattern in the inner chamber. The molded directional arrows on the diaphragm must point vertically.

Fasten the remaining outer chamber (item 15) to the pump, using the capscrews (items 9 & 12), hex nuts and flat washers.

**Step #6:** Re-install the elbow/spacer/manifold assemblies to the pump, using the capscrews (items 11), hex nuts and flat washers.

The pump is now ready to be re-installed, connected and returned to operation.

## OVERLAY DIAPHRAGM SERVICING

The PTFE overlay diaphragm (item 18) is designed to fit snugly over the exterior of the standard TPE diaphragm (item 17).

The molded directional arrows on the overlay diaphragm must point vertically.

Follow the same procedures described for the standard diaphragm for removal and installation.



## ! IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

## PUMPING HAZARDOUS LIQUIDS

When a diaphragm fails, the pumped liquid or fumes enter the air end of the pump. Fumes are exhausted into the surrounding environment. When pumping hazardous or toxic materials, the exhaust air must be piped to an appropriate area for safe disposal. See illustration #1 at right.

This pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. See illustration #2 at right. Piping used for the air exhaust must not be smaller than 1" (2.54 cm) diameter. Reducing the pipe size will restrict air flow and reduce pump performance. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills. See illustration #3 at right.

## CONVERTING THE PUMP FOR PIPING THE EXHAUST AIR

The following steps are necessary to convert the pump to pipe the exhaust air away from the pump.

Use a #8 Torx or flat screwdriver to remove the six self-tapping screws (item 1-J).

Remove the muffler cap and muffler (items 1-D and 1-F). The 1" NPT molded threads in the air distribution valve body (item 1-B).


Piping or hose may now be installed.

### IMPORTANT INSTALLATION


**NOTE:** The manufacturer recommends installing a flexible hose or connection between the pump and any rigid plumbing. This reduces stresses on the molded plastic threads of the air exhaust port. Failure to do so may result in damage to the air distribution valve body.

Any piping or hose connected to the pump's air exhaust port must be physically supported. Failure to support these connections could also result in damage to the air distribution valve body.

## Exhaust Conversion Drawing

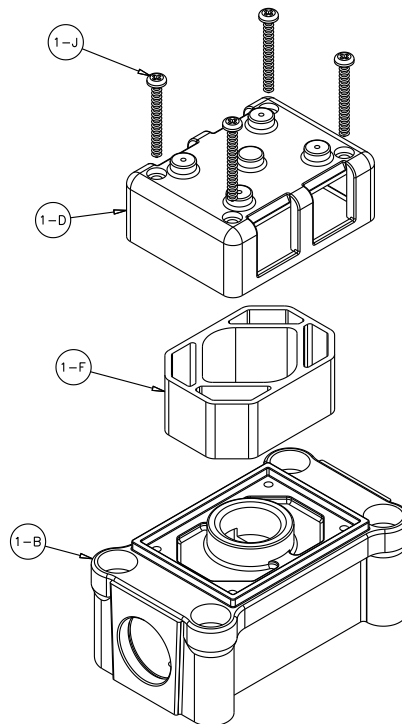

## CONVERTED EXHAUST ILLUSTRATION

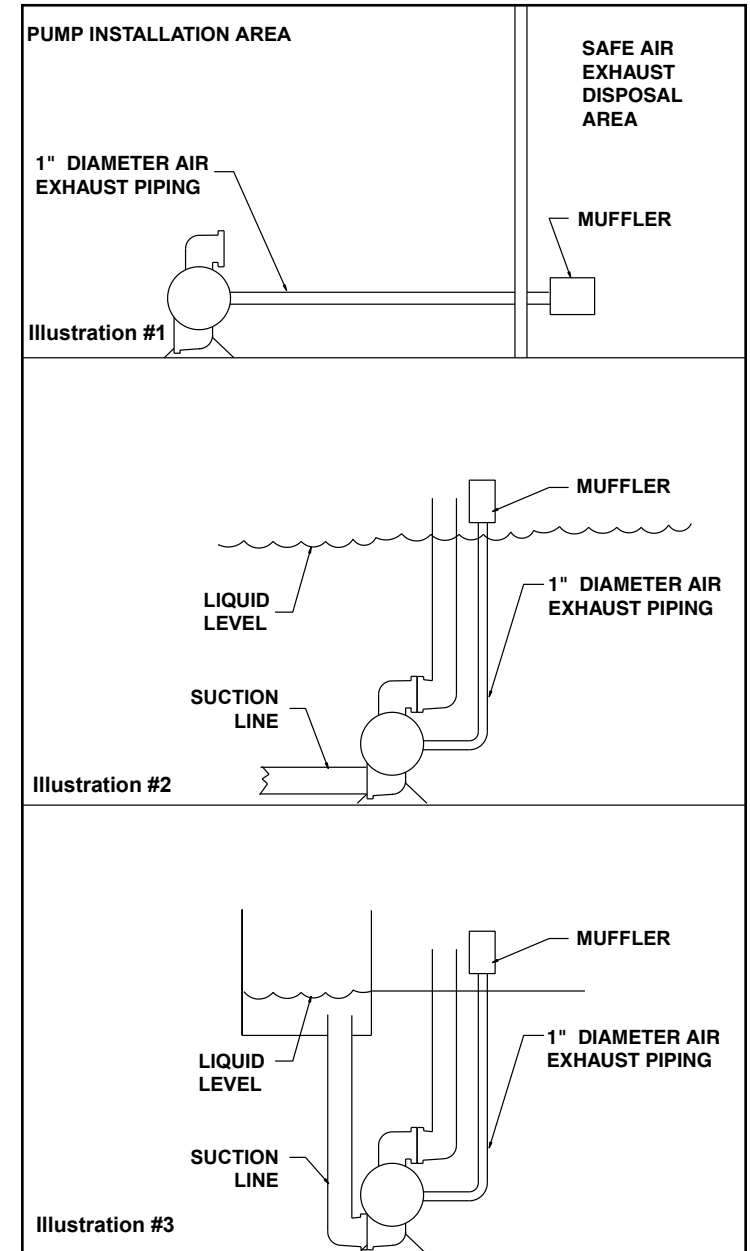

## MODULAR CHECK VALVE SERVICING

Before servicing the check valves, first shut off the suction line and then the discharge line to the pump. Next, shut off the compressed air supply, bleed air pressure from the pump, and disconnect the air supply line from the pump. Drain any remaining fluid from the pump. The pump can now be removed for service.

To access the modular check valve, remove the elbows (items 19 from pump composite repair parts drawing). Use a  $\frac{9}{16}$ " wrench or socket to remove the fasteners. Once the elbows are removed, the modular check valves can be seen in the cavities of the outer chamber (items 15).

Next remove the check valve seal (item 37). Inspect the seal for cuts or pinched areas. Replace seal as needed.

Disassemble the component parts of each modular check valve. Inspect the check valve retainer (item 32) for cuts, abrasive wear, or embedded materials. Replace as needed.

Inspect the check balls (items 3) for wear, abrasion, or cuts on the spherical surface. The check valve seats (items 38) should be inspected for cuts, abrasive wear, or embedded material on the surfaces of both the external and internal chamfers. The spherical surface of the check balls must seat flush to the surface of the inner chamfer on the check valve seats for the pump to operate to peak efficiency. Replace any worn or damaged parts as necessary.


Remove the remaining check valve seal (item 37). Inspect the seal for cuts or pinched areas. Replace seal as needed.

Re-assemble the modular check valve. The seat should fit snugly into the retainer.


Place a check valve seal (item 37) into the cavity of the outer chamber (item 15). Make sure the chamfer side of the seal faces out. Insert the modular check valve into the outer chamber with the retainer facing up. Install a check valve seal (item 37). Make sure the chamfer side of the seal faces the chamfer on the check valve seat or retainer.

The pump can now be reassembled, reconnected and returned to operation.

## Modular Check Valve Drawing

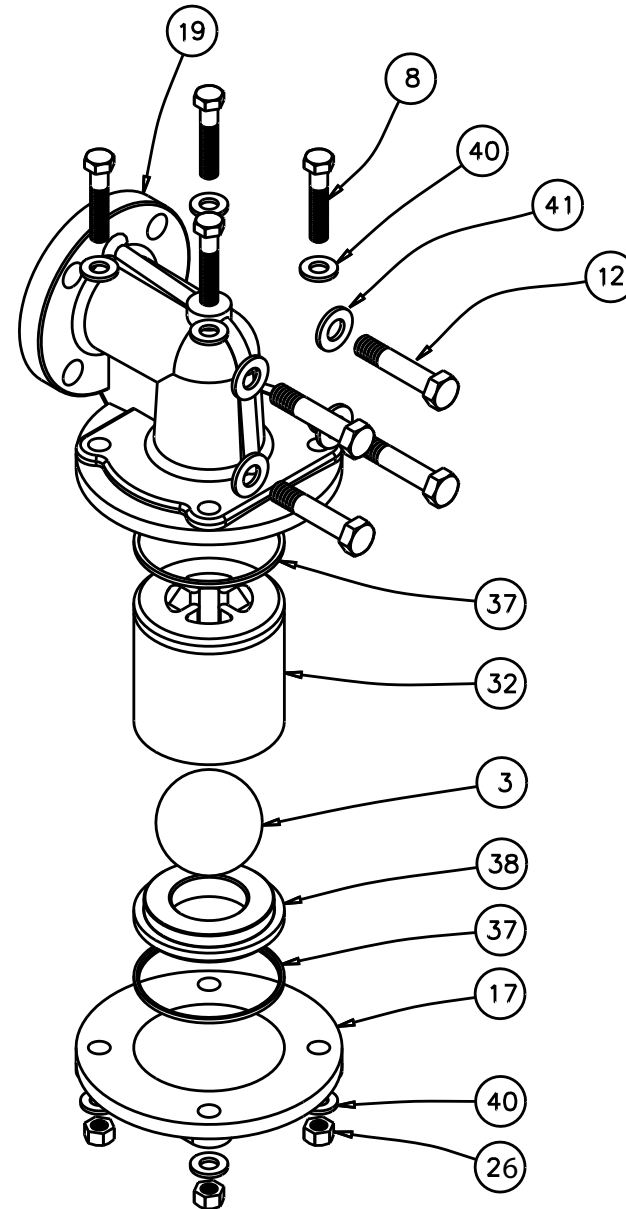

# Dual Port Option Drawing

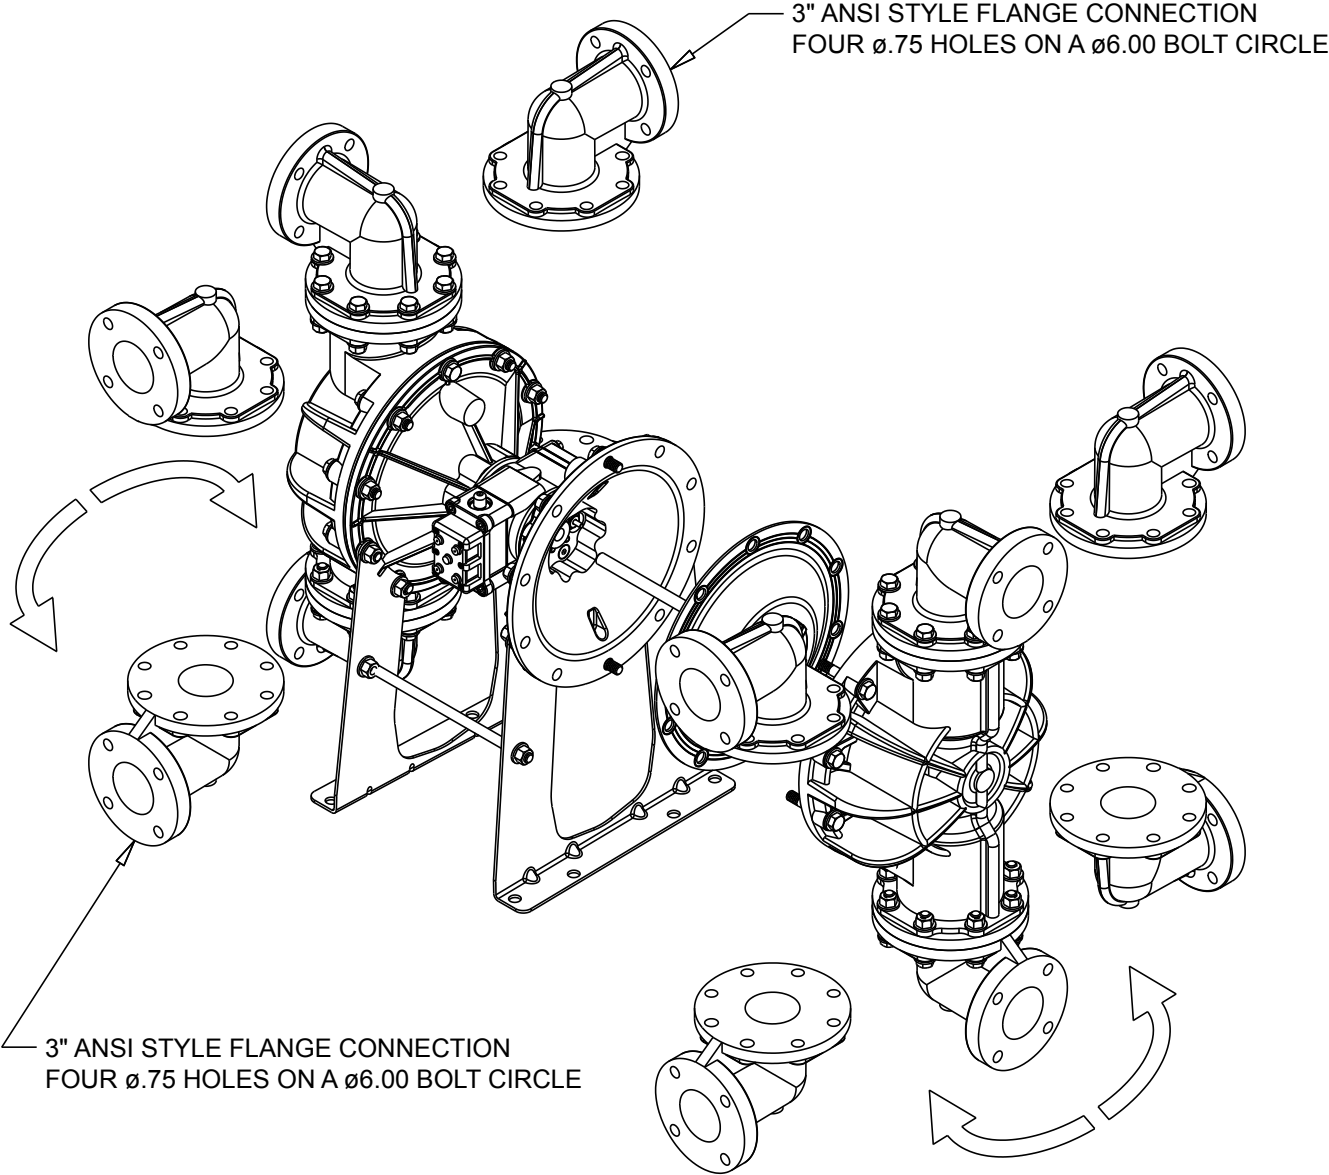

## DUAL PORTING OPTIONS

Several dual porting options are possible. The pump can be converted to a dual port arrangement on both the suction and the discharge ends. The porting can be configured to a single suction and a dual discharge. The porting can be changed to a dual suction and a single discharge.

The above changes are possible because the porting flange of the elbows (items 19) are designed to mate with standard 125# ANSI style 4-bolt, 3" pipe flanges.

### Dual porting of both suction and discharge ends of the pump

Converting the pump from the standard single suction and discharge porting configuration to dual porting at each end is easy. Simply remove the manifold seals, spacers, and manifolds (items 36, 39, and 24 from pump assembly drawing) from the pump.

The discharge and suction elbows can be rotated at 90° increments (see arrows and optional positioning in the Dual Porting Drawing.

### Single porting of the suction and dual porting of the pump discharge

To convert the pump from the standard single suction and single discharge porting configuration to a dual discharge porting arrangement remove the only the discharge manifolds, spacers, and manifold seals. Position the discharge elbows in the desired direction at 90° increments. (See arrows and optional positioning in the Dual Porting Drawing.)

### Dual porting of the suction and single porting of the pump discharge

To convert the pump from the standard single suction and single discharge porting configuration to a dual suction porting arrangement remove the only the suction (bottom) manifolds, spacers, and manifold seals.



Position the suction elbows in the desired direction at 90° increments. (See arrows and optional positioning in the Dual Porting Drawing.)



## ! IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

# Leak Detection Options Drawing

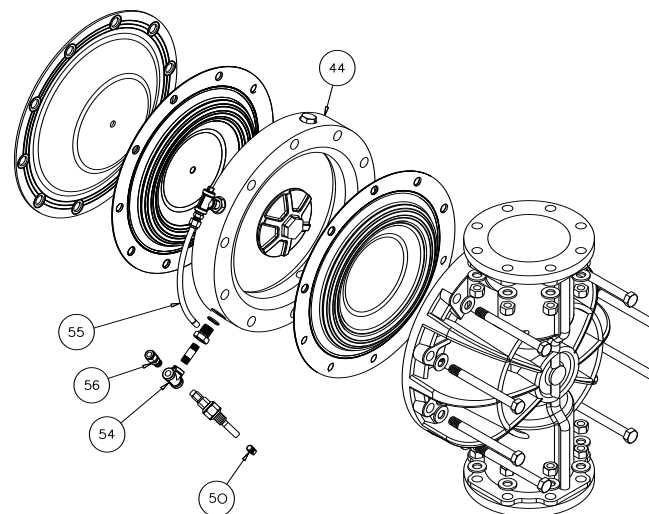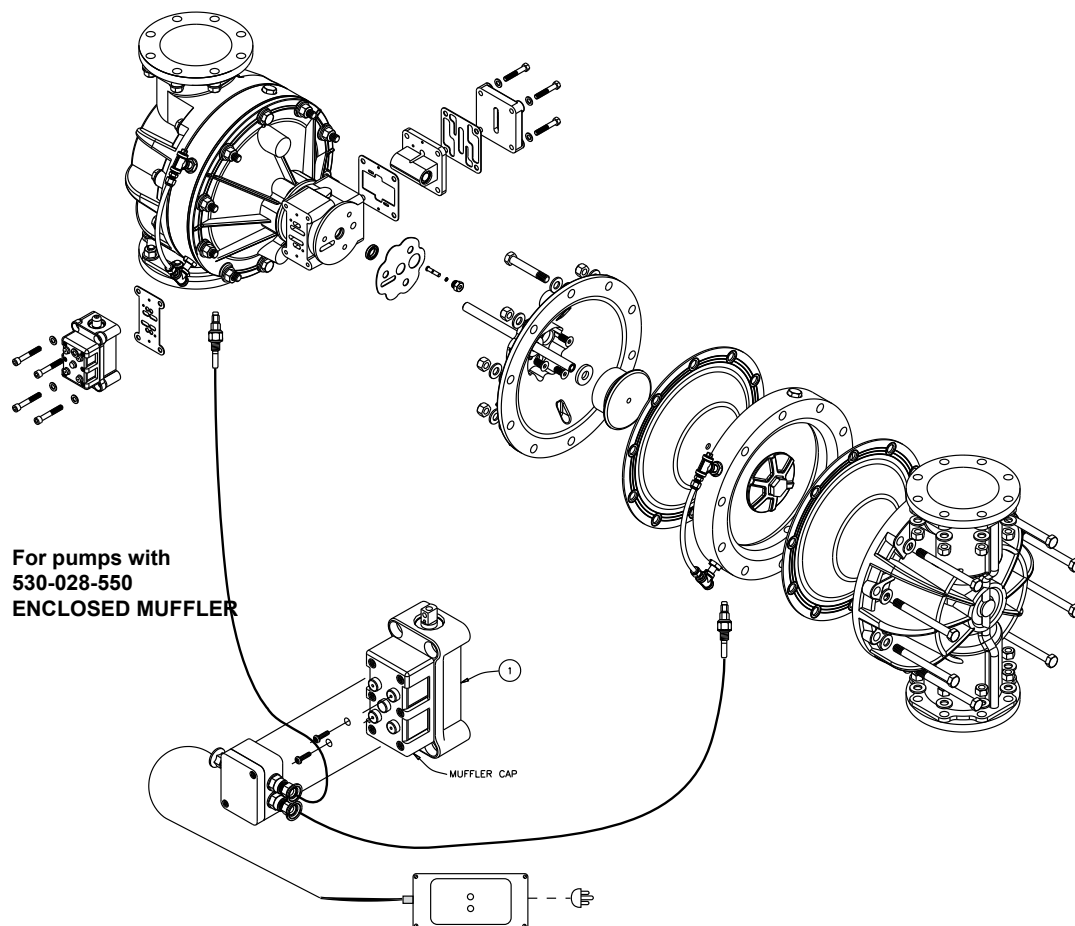

## LEAK DETECTION OPTION (ELECTRONIC)

Follow instructions found elsewhere in this manual, "Filling the Spill Containment Chambers" when installing leak detectors.

### Electronic Leak Detector Installation

|                 |               |         |
|-----------------|---------------|---------|
| Kit 032-037-000 | 100VAC        | 50Hz    |
|                 | or 110-120VAC | 50/60Hz |
|                 | or 220-240VAC | 50/60Hz |
| Kit 032-045-000 | 12-32VDC      |         |

To install electronic leak detectors, remove the bottom 1/4" NPT pipe plug on the visual sight tube (item 52). Insert leak detector into the 1/4" pipe tee (item 56).

## LEAK DETECTION OPTION (MECHANICAL)

Follow instructions found elsewhere in this manual, "Filling the Spill Containment Chambers" when installing leak detectors.

### Mechanical Leak Detector Installation

Kit 031-023-110

To install mechanical leak detectors, remove the bottom 1/4" NPT pipe plug on the visual sight tube (item 52). Insert leak detector into the 1/4" pipe tee (item 56).

# Pulse Output Kit Drawing

## PULSE OUTPUT KIT OPTION


This pump can be fitted with a Pulse Output Kit. This converts the mechanical strokes of the pump to an electrical signal which interfaces with the Stroke Counter/ Batch Controller or user control devices such as a PLC.

The Pulse Output Kits mount directly onto the Muffler Cap on the Air Distribution Valve Assembly or onto the air valve and senses each stroke of the main spool.



Consult the factory for further information and availability.

## Pulse Output Kits

|             |                              |
|-------------|------------------------------|
| 475-244-001 | 10-30 VDC                    |
| 475-244-002 | 110/220 VAC                  |
| 475-244-003 | 10-30VDC, 110VAC and 220 VAC |

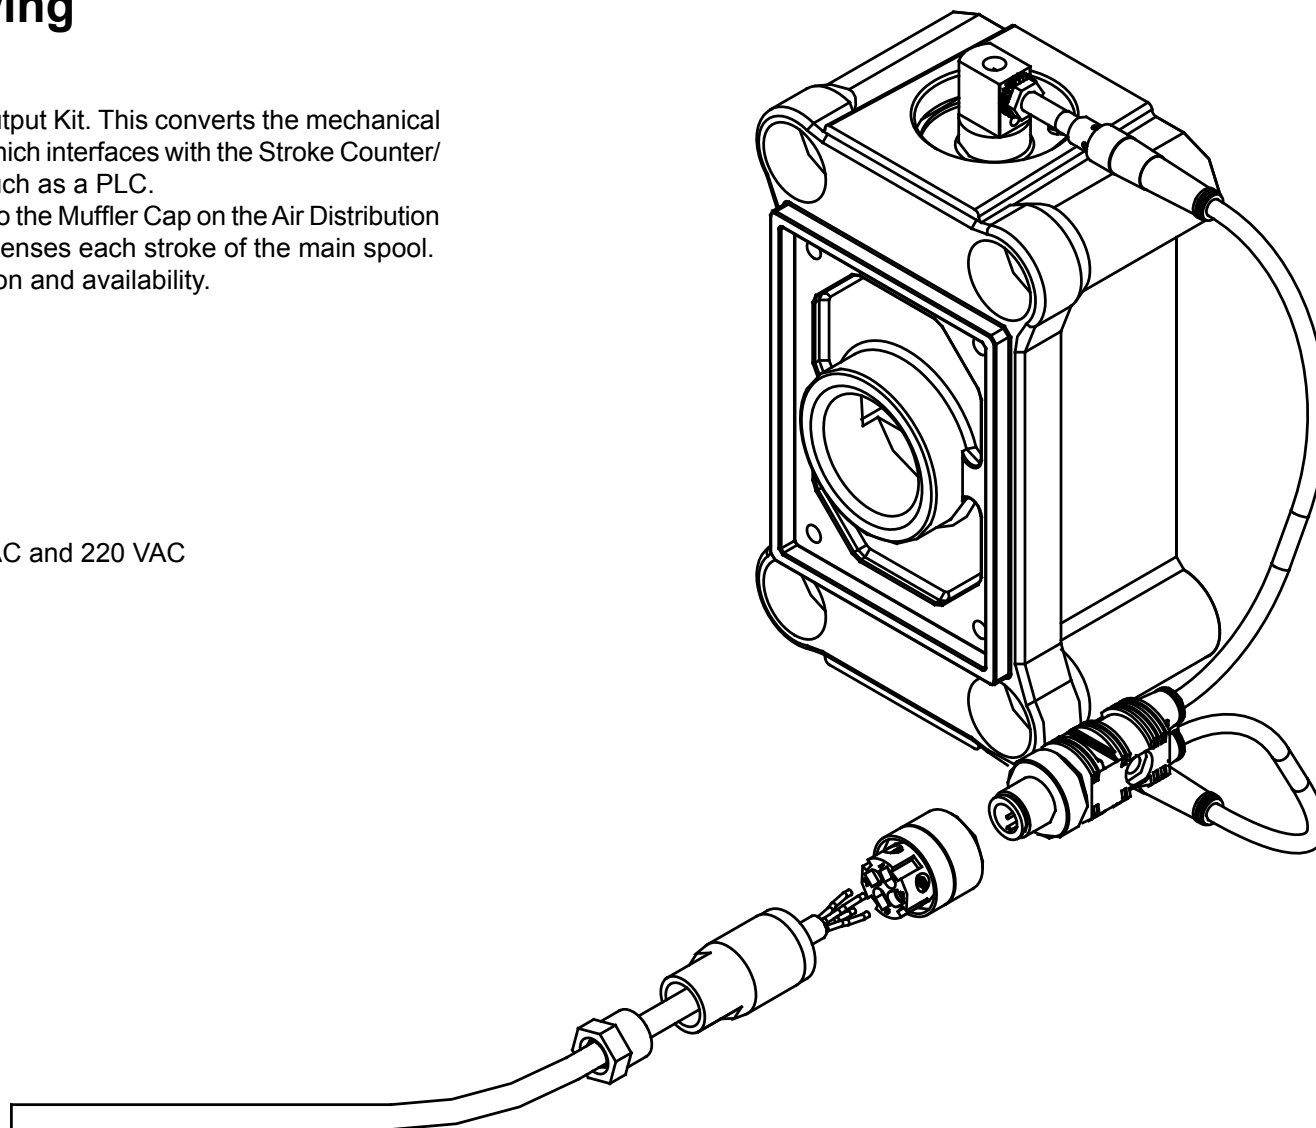

# Leak Detection Options Drawing

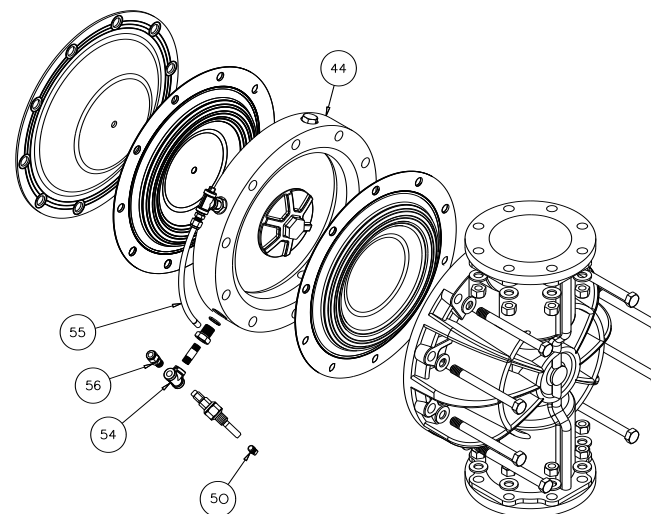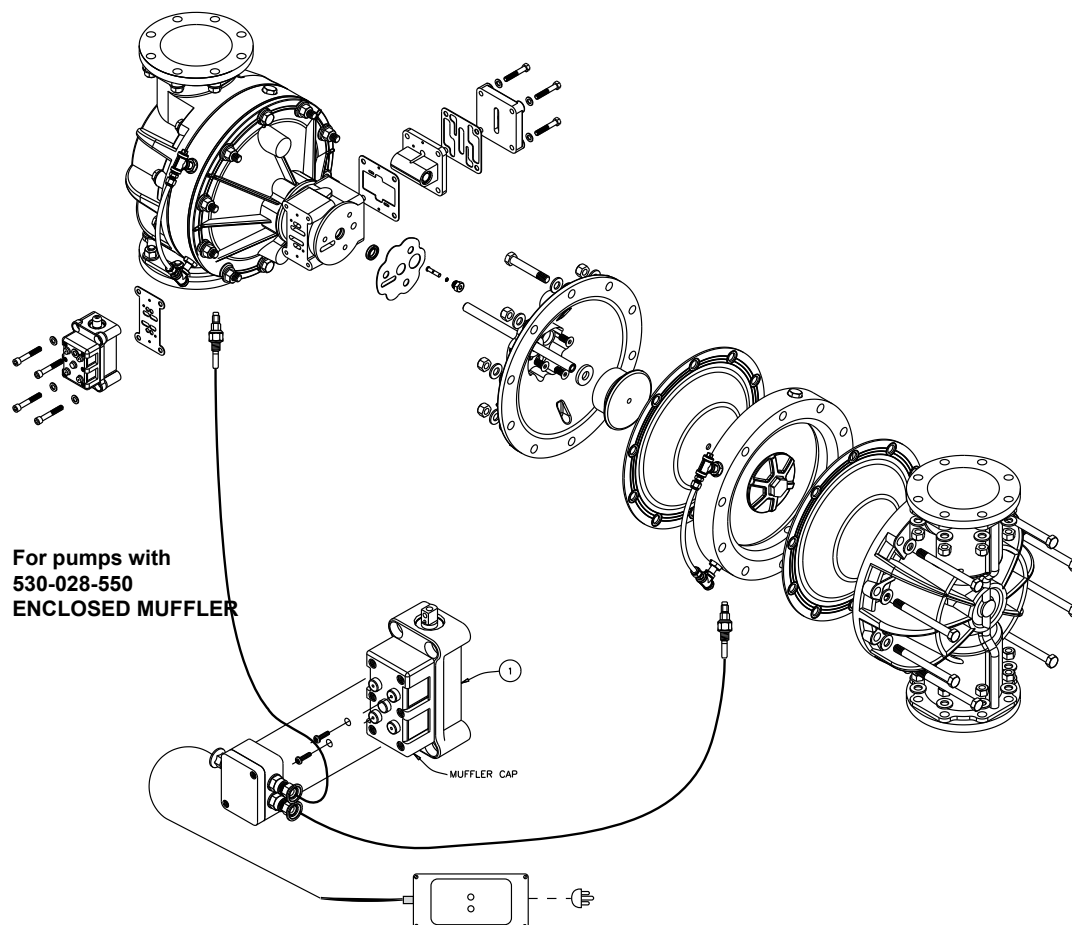

## LEAK DETECTION OPTION (ELECTRONIC)

Follow instructions found elsewhere in this manual, "Filling the Spill Containment Chambers" when installing leak detectors.

### Electronic Leak Detector Installation

|                 |               |         |
|-----------------|---------------|---------|
| Kit 032-037-000 | 100VAC        | 50Hz    |
|                 | or 110-120VAC | 50/60Hz |
|                 | or 220-240VAC | 50/60Hz |
| Kit 032-045-000 | 12-32VDC      |         |

To install electronic leak detectors, remove the bottom 1/4" NPT pipe plug on the visual sight tube (item 52). Insert leak detector into the 1/4" pipe tee (item 56).

## LEAK DETECTION OPTION (MECHANICAL)

Follow instructions found elsewhere in this manual, "Filling the Spill Containment Chambers" when installing leak detectors.

### Mechanical Leak Detector Installation

Kit 031-023-110

To install mechanical leak detectors, remove the bottom 1/4" NPT pipe plug on the visual sight tube (item 52). Insert leak detector into the 1/4" pipe tee (item 56).

# Optional Muffler Configurations, Drawing

## OPTION 0

530-028-550 Integral Muffler uses (1) Cap and (4) 710-015-115 Self Tapping Screw to hold it in place.

## OPTION 1


530-027-000 Sound Dampening Muffler screws directly into the Air Valve body. This muffler is equipped with a porous plastic element.

## OPTION 2


530-010-000 Mesh Muffler screws directly into the Air Valve Body. This muffler is equipped with a metal element.

## OPTION 6



530-033-000 Metal Muffler screws directly into the Air Body.

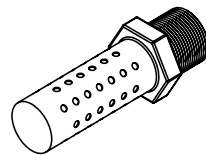

Option 6

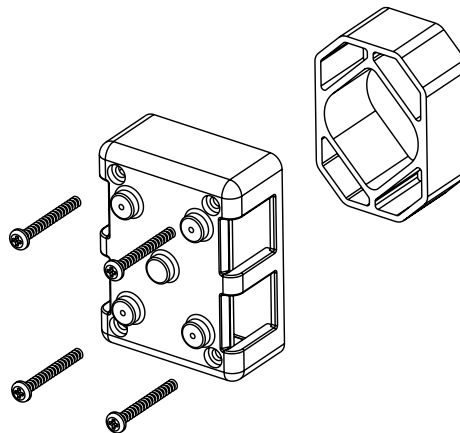

Option 0

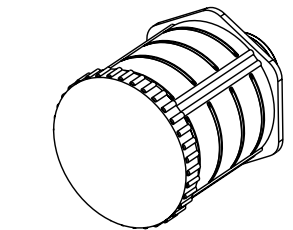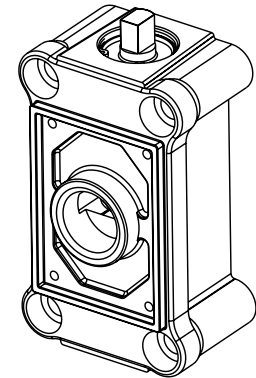

Option 1 and 2

# 5 - YEAR Limited Product Warranty

Warren Rupp, Inc. ("Warren Rupp") warrants to the original end-use purchaser that no product sold by Warren Rupp that bears a Warren Rupp brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Warren Rupp's factory. Warren Rupp brands include Warren Rupp®, SANDPIPER®, MARATHON®, PortaPump®, SludgeMaster™ and Tranquilizer®.

~ See [sandpiperpump.com/content/warranty-certifications](http://sandpiperpump.com/content/warranty-certifications) for complete warranty, including terms and conditions, limitations and exclusions. ~

**WARREN  
RUPP, INC.**

## Declaration of Conformity

Manufacturer: Warren Rupp, Inc., 800 N. Main Street, Mansfield, Ohio, 44902 USA

Certifies that Air-Operated Double Diaphragm Pump Series: HDB, HDF, M Non-Metallic, S Non-Metallic, M Metallic, S Metallic, T Series, G Series, U Series, EH and SH High Pressure, RS Series, W Series, SMA and SPA Submersibles, and Tranquilizer® Surge Suppressors comply with the European Community Directive 2006/42/EC on Machinery, according to Annex VIII. This product has used Harmonized Standard EN809:1998+A1:2009, Pumps and Pump Units for Liquids - Common Safety Requirements, to verify conformance.

David Roseberry  
Signature of authorized person

David Roseberry  
Printed name of authorized person

October 20, 2005

Date of issue

Engineering Manager

Title

August 23, 2012

Date of revision



Revision Level: F